

2005 Volkswagen Maintenance Schedule by Miles / Kilometers

Revised May 16, 2008

2.0 Liter TDI-PD Engine:

Z.o Eltor Ibi i b Eligilio.																				
Miles (in thousands)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
Kilometers (in thousands)	8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160
Engine: change engine oil and oil filter	•	•		•		•		•		•		•		•		•		•		•
Engine: check for leaks				•				•				•				•				•
Service interval display: Reset (Where applicable)	•	•		•		•		•		•		•		•		•		•		•
Battery: check				•				•				•				•				•
Door check straps: lubricate				•				•				•				•				•
Wipers: check								•								•				
Windshield washer fluid: check level; add if necessary		•		•		•		•		•		•		•		•		•		•
Dust & pollen filter: replace (Where applicable)				•				•				•				•				•
Automatic shift lock: check operation including park/neutral position switch		•		•		•		•		•		•		•		•		•		•
Automatic transmission: check for leaks				•				•				•				•				•
Tire pressure monitoring system sensors: check battery charge, replace wheel electronics and aluminum valve if necessary (<i>Where applicable</i>)		•		•		•		•		•		•		•		•		•		•
Tires: check tread depth and adjust pressure if necessary		•		•		•		•		•		•		•		•		•		•
Tires/spare wheel: check condition and pressure				•				•				•				•				•
Wheels: rotate front to rear		•		•		•		•		•		•		•		•		•		•
Drive shafts: check boots				•				•				•				•				•
On-Board Diagnostic system: check fault memory; erase if necessary				•				•				•				•				•
Brake system: check for damage/leaks, brake pad thickness, brake fluid level		•		•		•		•		•		•		•		•		•		•

Continues at next page



2005 Volkswagen Maintenance Schedule by Miles / Kilom eters

Revised May 16, 2008

2.0 Liter TDI-PD Engine (cont'd):

Miles (in thousands)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
Kilometers (in thousands)	8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160
Cooling system: check coolant level; add if necessary				•				•				•				•				•
Automatic transmission: check ATF								•								•				
Front axle: check dust seals on ball joints and tie rod ends; check tie rods				•				•				•				•				•
Air cleaner: replace filter								•								•				
Headlights: check & adjust if necessary				•				•				•				•				•
Exhaust system: check for damage & leaks				•				•				•				•				•
Sunroof frame: clean and lubricate				•				•				•				•				•
Power steering: check fluid level								•								•				
Water separator: drain	•	•		•		•		•		•		•		•		•		•		•
Fuel filter: replace				•				•				•				•				•
Timing belt: replace																•				
V-belt/ribbed belt: check; adjust if necessary								•								•				
Road Test: check kickdown, braking, steering, heating and ventilation, air conditioning, power accessories and electrical systems				•				•				•				•				•

Every 12 months, regardless of mileage (kilometers): Perform visual check on Airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.