

# 2016 Volkswagen *Beetle Convertible* Maintenance Schedule For USA

## 2.0L TDI Engine



Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K
AdBlue®. Fluid: Check fluid level and add if necessary	X	X	X	6	X	X	X	6	X	X	X	6	X
Air filter element and snow filter: Replace and clean housing <b>(Every 6 years regardless of mileage)</b>						7						7	
Battery: Check		X		X		X		X		X		X	
Body: Visual inspection for corrosion				X				X				X	
Brake pads: Check thickness and brake disc condition. Look for contact pattern and corrosion of brake discs <b>(front and rear)</b>	X		X		X		X		X		X		X
Brakes: Inspect brake system and shock absorber for leaks and damage, check thickness of brake pads, brake disc condition front and rear. Look for contact pattern and corrosion of brake discs, and check brake fluid level subject to abrasion		X		X		X		X		X		X	
Brake fluid and clutch unit: Change fluid <b>(Every 3 years regardless of mileage and every 2 years after)</b>			4		4		4		4		4		
Convertible roof, CSC roof, and Retractable hard top: Check for function and damage, clean and lubricate seals <b>(if applicable)</b>				1				1				1	
Convertible roof water drains: Check				X				X				X	
Coolant level and frost protection: Check				X				X				X	
CV joints: Check for leaks and damage				X				X				X	
Diesel Particulate Filter: <b>Perform after the first 120,000 miles or 120,000 miles after a Diesel Particulate Filter (DPF) replacement.</b> Check ash loading according to manufacturer work procedure; Replace if necessary. <b>NOTE:</b> If DPF replacement is not necessary, perform check every 20,000 miles thereafter until replacement becomes necessary												X	
Dust and pollen filter: Replace <b>(Every 2 years or 40,000 miles)</b>				2				2				2	
Engine: Change oil and replace oil filter	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine and engine compartment components: Check <b>(from above)</b> for leaks and damage				X				X				X	
Engine and engine compartment components: Check <b>(from below)</b> for leaks and damage, check transmission, final drive, and drive shaft boots				X				X				X	
Exhaust system: Check for leaks, damage and secure fittings				X				X				X	

**2016 Volkswagen *Beetle Convertible* Maintenance Schedule For USA**  
**2.0L TDI Engine**



Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K
Fuel filter: Replace		X		X		X		X		X		X	
Headlights: Check adjustment				X				X				X	
Interior lighting and glove box lights, cigarette lighter / power outlets, horn, and all warning lamps: Check				X				X				X	
Lighting: Front and rear lights, luggage compartment lighting, turn signals, hazard warning lights: Check				X				X				X	
Power steering: Check oil level				X				X				X	
Ribbed belt: Check condition (if applicable)				X				X				X	
Service interval display: Reset	X	X	X	X	X	X	X	X	X	X	X	X	X
Sunroof and panoramic sunroof: Check, clean, and lubricate (if applicable)				X				X				X	
Sunroof: Open sunroof and check front water drains and clean if necessary (if applicable)				X				X				X	
Test drive: Check braking, kickdown, steering, electrical, heating and ventilation systems, air conditioning, handling, and parking brake				X				X				X	
Tie rod ends: Check for excessive play and looseness, check boots				X				X				X	
Timing Belt: Replace													X
Tires: Check tread depth, condition, wear pattern and pressure of all tires (including spare)		X		X		X		X		X		X	
Tire mobility kit: Check and observe expiration date on the tire filler bottle (Every 2 years regardless of mileage)		3		3		3		3		3		3	
Tire mobility kit: Replace tire filler bottle (Every 4 years regardless of mileage)				5				5				5	
Transmission: DSG (non Automatic): Change fluid and filter (if applicable)				X				X				X	
Underbody sealant: Inspect for damage				X				X				X	
Windshield washers, headlight cleaning system, and wiper blades: Check for damage and function, Check fluid level and add if necessary	X	X	X	X	X	X	X	X	X	X	X	X	X

1. Every 2 years, regardless of mileage: Check latch for convertible roof

**2016 Volkswagen *Beetle Convertible* Maintenance Schedule For USA**  
**2.0L TDI Engine**



Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K

2. Every 2 years, or 40,000 miles: Dust and pollen filter: Replace **(if applicable)**
3. Every 2 years, regardless of mileage: Tire filler bottle in the tire mobility kit: Check **(observe expiration date) (if applicable)**
4. At the 3 year mark, then every 2 years regardless of miles driven: Brake fluid and clutch unit: Replace fluid
5. Every 4 years, regardless of mileage: Tire filler bottle in the tire mobility set: Replace **(Observe expiration date)**
6. At the 4 year mark, if the mileage is under 10,000 miles: AdBlue®: Change fluid
7. Every 6 years regardless of mileage: Air filter element and snow filter: Replace element and clean screen and housing **(if applicable)**

© 2015 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

**Posted: August 2015**