


Parking aid,
from September 2000

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

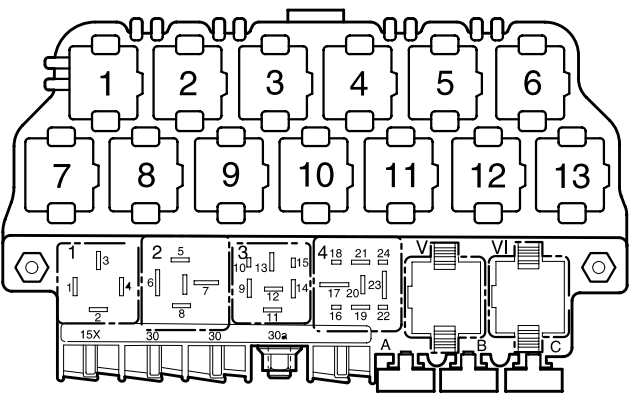

97-14163

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5 A – brown
- 5 A – beige
- 3 A – lilac

Parking aid control unit, reversing light switch

- D – Ignition/starter switch
- F4 – Reversing light switch*
- J226 – Starter inhibitor and reversing light relay
- J446 – Parking aid control unit, on right luggage compartment
- M16 – Reversing light bulb, left
- M17 – Reversing light bulb, right
- S5 – Fuse in fuse box
- S7 – Fuse in fuse box
- T5h – 5-pin connector, near lower part of left A- pillar, entwined in wiring harness
- T10 – 10-pin connector, orange, in protective housing for connectors, in plenum chamber, left
- T16c – 16-pin connector

- (A2) – Positive (+) connection (15), in dash panel wiring harness
- (A20) – Connection (15a), in dash panel wiring harness
- (A87) – Connection (RL), in dash panel wiring harness
- (B163) – Positive (+) connection -1- (15), in interior wiring harness
- (B182) – Connection (RL), in interior wiring harness

- * – Only models with manual gearbox
- – Only models with automatic gearbox

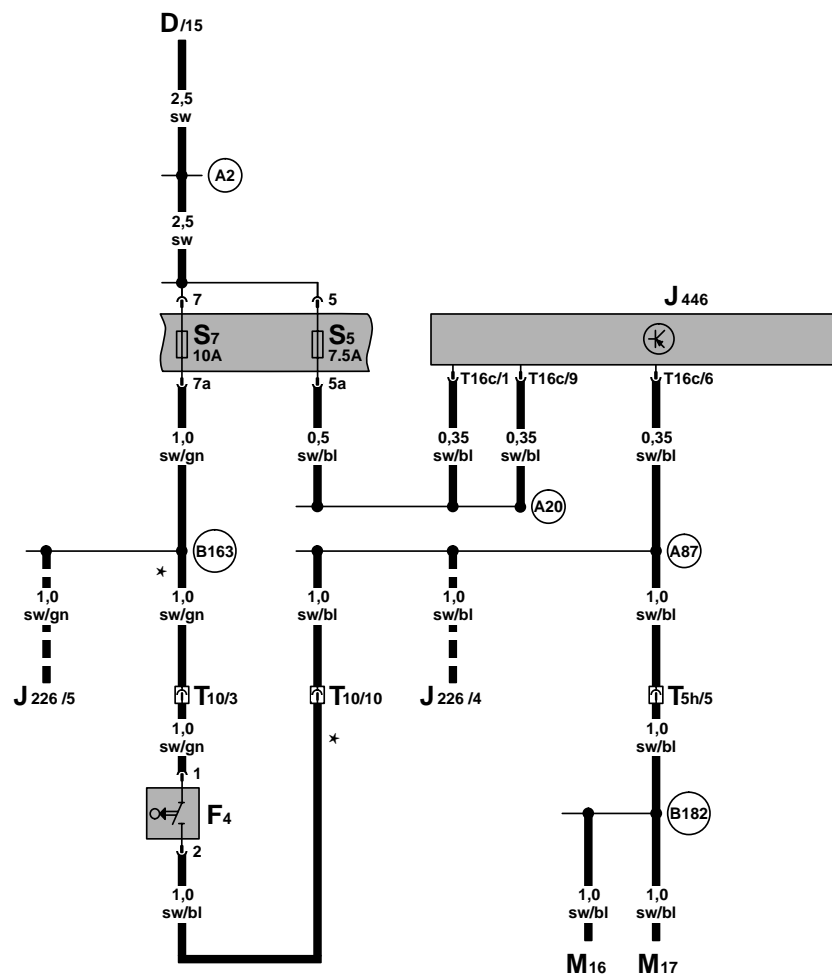

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

1 2 3 4 5 6 7 8 9 10 11 12 13 14

97-27853


Parking aid control unit, parking aid warning buzzer

- E18 – Rear fog light switch
- F216 – Rear fog light cut-out, contact switch, in trailer socket
- H15 – Rear parking aid warning buzzer
- J446 – Parking aid control unit, on right luggage compartment
- K13 – Rear fog light warning lamp
- L46 – Rear fog light bulb, left
- T3 – 3-pin connector
- T5i – 5-pin connector, near lower part of left A- pillar, entwined in wiring harness
- T6a – 6-pin connector, on left tail light
- T6b – 6-pin connector, on right tail light
- T13 – 13-pin connector
- T16c – 16-pin connector
- T17 – 17-pin connector, on lighting switch
- T32 – 32-pin connector, blue
- U10 – Trailer socket

- (A88) – Connection (RFL), in dash panel wiring harness
- (B237) – Positive (+) connection (parking aid), in interior wiring harness
- (W4) – Connection -1- (rear fog lights), in rear wiring harness
- (W25) – Connection -2- (rear fog lights), in rear wiring harness

- * – Only models without trailer towing
- ** – Only Golf estate/Bora estate
- *** – Only Golf/Bora hatchback
- – Only models with trailer towing


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

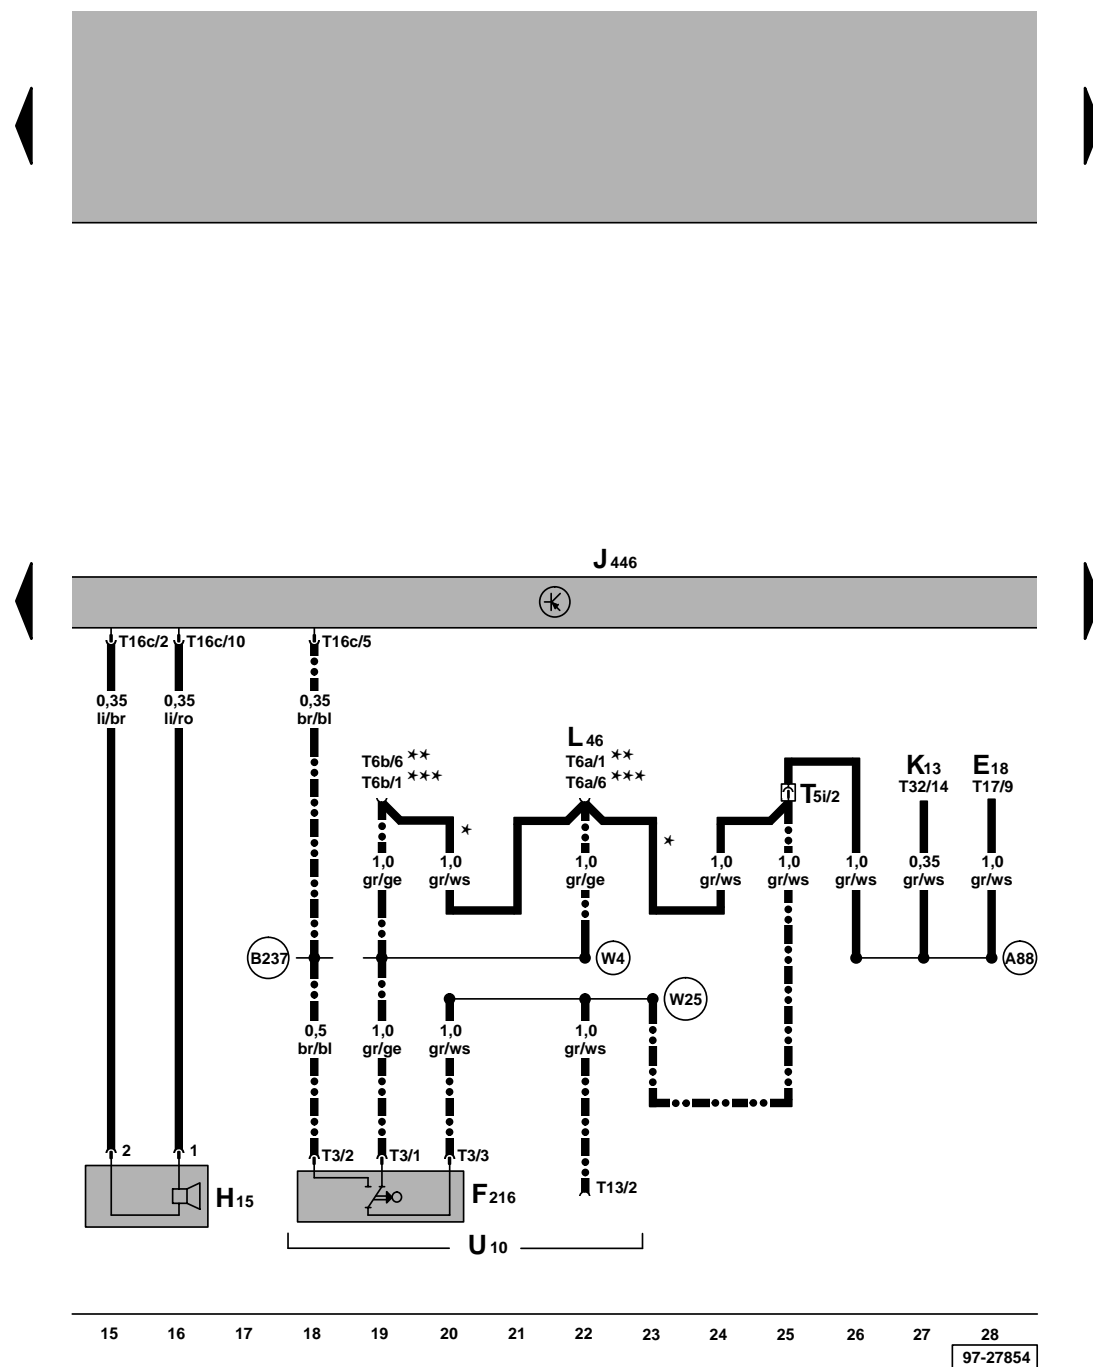

Parking aid control unit, rear parking aid sender

- G203 – Rear left parking aid sender
 G204 – Centre rear left parking aid sender
 G205 – Centre rear right parking aid sender
 G206 – Rear right parking aid sender
 J446 – Parking aid control unit, on right luggage compartment
 T12f – 12-pin connector
 T16 – 16-pin connector, in dash panel centre, self-diagnosis connection
 T16c – 16-pin connector

- (42) – Earth point, next to steering column
 (49) – Earth point, on steering column
 (81) – Earth connection -1-, in dash panel wiring harness
 (135) – Earth connection -2-, in dash panel wiring harness
 (A76) – Connection (diagnosis wire K), in dash panel wiring harness

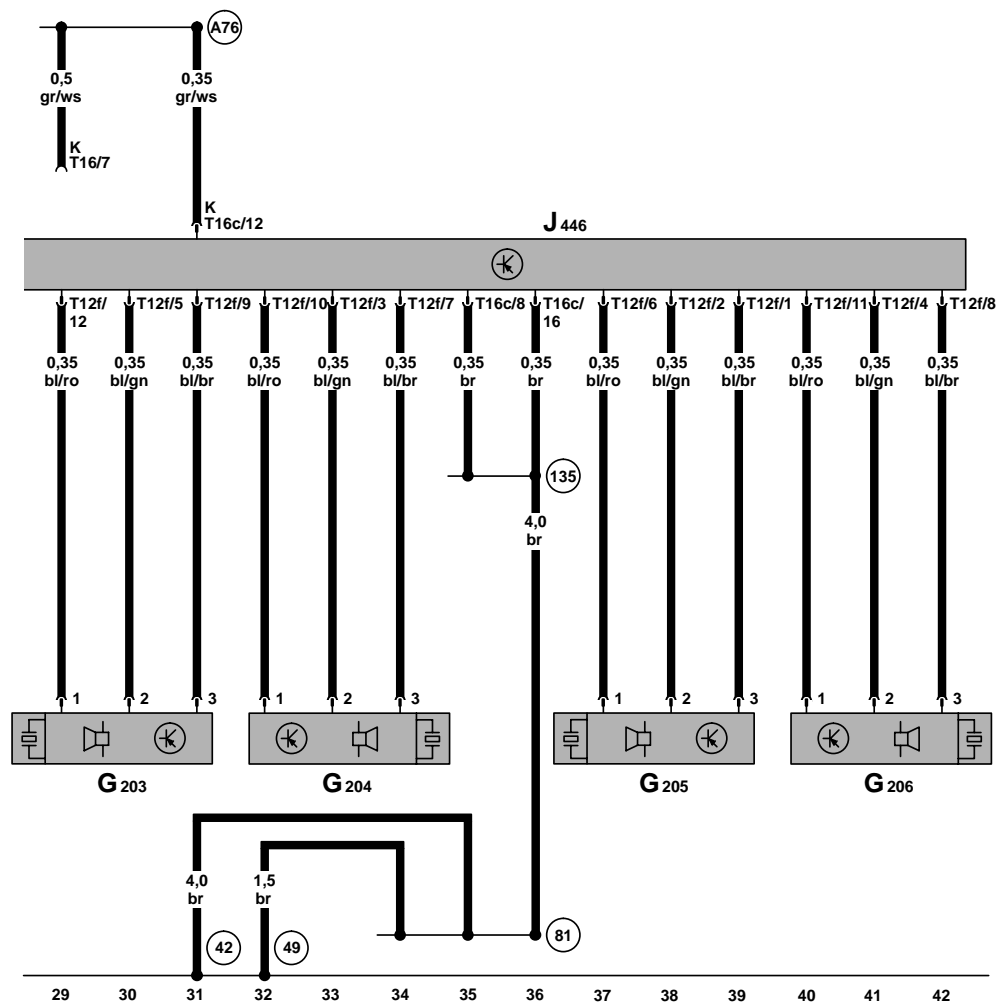

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange