

#### Subject: Central Locking System, Function Options

Model(s): Passat	1998	Date: Nov. 25, 1998
New Beetle		

#### Supersedes T.B. Group 01 Number 98-01 dated Mar. 25, 1998

#### Note:

Supersession due to m.y. change only.

### Condition

Customer refers to statements in the Owner's Manual indicating that specific remote/central locking functions can be "activated" by a Volkswagen Dealer.

Group: 01 Number: 98-16

#### Service

First review Owner's Manual with customer to confirm the desired function changes. Then refer to Table of Contents below and select appropriate options.

#### Note:

- For New Beetle models, the following information is contained in Repair Manual, Body, On Board Diagnostic (OBD), Repair Group 01.
- For Passat models, the following information will be included in the Repair Manual at the next update.

### **Table of Contents**

Description	page
Unlocking options	2
Locking options	3
Adaptation example	4



#### **Unlocking options**

- ♦ Selective unlocking (⇒ Owner's Manual for detailed description)
- All doors unlock simultaneously
- Connect VAG 1551/1552 Scan Tool to Data Link Connector (DLC) ⇒ Repair Manual, Body, On Board Diagnostic (OBD), Repair Group 01.

### For Passat & New Beetle with Power Windows:

- Enter address word 46, *Comfort System* and select function 07, *Code Control Module.* 

#### For New Beetle without Power Windows:

- Enter address word 35, *Central Locking System* and select function 07, *Code Control Module.*
- Review available function descriptions in table below and enter corresponding Control Module code based on applicable equipment.
- After entering code number, confirm entry with -Q- button.

Vehicle equipment	Available functions	Code number
Central locking and	Selective unlocking	00256
2 Power windows*	All doors unlock	00257
Central locking and	Selective unlocking	00258
2 Power windows with seat memory	All doors unlock	00259
Central locking and	Selective unlocking	04096
4 Power windows	All doors unlock	04097
Central locking and	Selective unlocking	04098
4 Power windows with seat memory	All doors unlock	04099

\* Also valid for New Beetle without power windows

(Cont. on Page 3)



### Locking options

- Automatic lock/unlock\* (all doors are locked automatically at 15 km/h /10 mph and unlocked when key is removed from ignition switch).
- Alarm system confirmation signals on or off

\* May not be possible on Passat built prior to 08.97

 Connect VAG 1551/1552 Scan Tool to Data Link Connector (DLC) ⇒ Repair Manual, Body, On Board Diagnostic (OBD), Repair Group 01.

### For Passat & New Beetle with Power Windows:

- Enter address word 46, *Comfort System* and select function 10, *Adaptation*.

#### For New Beetle without Power Windows:

- Enter address word 35, *Central Locking System* and select function 10, *Adaptation*.
- Review available channel function descriptions in table below.
- Using the VAG 1551/1552 keypad, enter the corresponding adaptation value either directly or step-by-step. A step-by-step adapation example is given on page 4.

Channel number	Function	Adaptation value
03	Auto lock/unlock	on = 1 off = 0
04	n/a	n/a
05	Unlock, horn sounds	on = 1 off = 0
06	Lock, horn sounds	on = 1 off = 0
07	Unlock, turn signals flash	on = 1 off = 0
08	Lock, turn signals flash	on = 1 off = 0

(Cont. on Page 4)



