



# Tech Tips

TT 01-08-02

Date: 2008

## All Models - Fault Code Index Numbers During Diagnosis

In some cases the index code number listed after the fault code may aid in the diagnosis path. Below is a list of current index numbers and the meaning of each:

XXXXX-001	Upper Limit exceeded
XXXXX-002	Lower Limit exceeded
XXXXX-003	Mechanical Fault
XXXXX-004	No signal/communication
XXXXX-005	no or wrong basic settings/adaptation
XXXXX-006	short to B+ (loss of ground)
XXXXX-007	Short to Ground
XXXXX-008	Implausible signal
XXXXX-009	open/short to ground
XXXXX-010	open/short to B+
XXXXX-011	Open circuit
XXXXX-012	electrical fault in circuit
XXXXX-013	check fault memory
XXXXX-014	Defective (faulty)
XXXXX-015	Cannot be checked at the moment