

J293 T14	Manual	Climatronic
	1 V51/1	V51/1
	2 G65, ECU	G65, ECU
	3 T10/7	Open
	4 S16	S16, T16a/7
	5 F38	T14/14
	6 Ground	Ground
	7 F18/3	F18/3
	8 T10/8	T12/2
	9 S5	S5
	10 N25/1	N25/1
	11 T10w/6	T10w/6
	12 Open	T16b/2
	13 T32a/12	T32a/12
	14 F38/1	T14/5

J293 T4a	Manual	Climatronic
	1 S164	S164
	2 V7, V35	V7, V35
	3 F18/2, S180	F18/2, S180
	4 V7, V35	V7, V35

J293	Fan Control Module
F38	Ambient Temperature Switch
S16	Fuse 16 (10A)
T4a	4-pin connector on Fan Control Module
T10	10-pin Orange connector in plenum
T12	12-pin connector on Climatronic Control Module
T14	14-pin connector on Fan Control Module
T16a	16-pin connector on Climatronic Control Module
T16b	16-pin connector on Climatronic Control Module

J255 T12	1	K-line (grey/white)	
	2	T14/8	
	3	T10/8	
	4	Unused	
	5	Instrument panel dimmer (grey/blue)	
	6	Unused	
	7	G89/1	
	8	G17/1	
	9	Sensor ground (brown/white)	G17/2, G107/2 T12/12, G192/2, G89/2, T5/5, T6c/3, T6b/3, T6a/1
	10	Unused	
	11	Unused	
	12	Sensor ground (brown/white)	G17/2, G107/2 T12/9, G192/2, G89/2, T5/5, T6c/3, T6b/3, T6a/1

G17	Outside air temperature sensor
G89	Fresh air intake duct temperature sensor (Climatronic airbox)
G107	Sunlight photo sensor
G192	Sender for floor outlet temperature (Climatronic airbox)
J255	Climatronic Control Module
T5	5-pin connector on Climatronic airbox
T6a	6-pin connector on Climatronic airbox
T6b	6-pin connector on Climatronic airbox
T6c	6-pin connector on Climatronic airbox
T10	10-pin Orange connector in plenum
T12	12-pin connector on Climatronic control module
T14	14-pin connector on Fan Control Module

J255 T16a

- 1
- 2 T6a/4
- 3 T6b/6
- 4 T6c/6
- 5 T5/1
- 6
- 7 T14/4 S16
- 8
- 9 S5
- 10 T6a/6
- 11 T6b/4
- 12 T6c/4
- 13 T5/2
- 14
- 15 Ground
- 16

J255	Climatronic Control Module
S5	Fuse 5 (7.5A)
S16	Fuse 16 (10A)
T5	5-pin connector on Climatronic airbox
T6a	6-pin connector on Climatronic airbox
T6b	6-pin connector on Climatronic airbox
T6c	6-pin connector on Climatronic airbox
T14	14-pin connector on Fan Control Module
T16a	26-pin connector on Climatronic Control Module

J255 T16b	1				
	2	T14/12			
	3				
	4	T32/3			
	5				
	6	T10/9	T32/11 (Through April 2002)		
	7	Unused			
	8	T5/4	T6c/1	T6b/1	T6a/3
	9				
	10	Unused			
	11	J126/2	V2/2		
	12	T10/7			
	13				
	14	S225	V2/1		
	15				
	16	J126/1			

J126	Control module for fresh air blower (Climatronic airbox)
J255	Climatronic Control Module
S225	Fuse 25 (25A)
T5	5-pin connector on Climatronic airbox
T6a	6-pin connector on Climatronic airbox
T6b	6-pin connector on Climatronic airbox
T6c	6-pin connector on Climatronic airbox
T10	10-pin Orange connector in plenum
T14	14-pin connector on Fan Control Module
T16b	16-pin connector on Climatronic Control Module
T32	32-pin Blue connector on instrument cluster
V2	Fresh air blower (Climatronic airbox)

J255 T20	1	T32a/26
	2	
	3	
	4	
	5	G192/1
	6	
	7	G263/1
	8	T6a/2
	9	T6c/2
	10	T6b/2
	11	
	12	
	13	Unused
	14	
	15	
	16	
	17	T5/3
	18	G107/3
	19	
	20	

G107	Sunlight photo sensor
G192	Sender for floor outlet temperature (Climatronic airbox)
G263	Sensor for Evaporator Outlet Temperature (Climatronic airbox)
J255	Climatronic Control Module
T5	5-pin connector on Climatronic airbox
T6a	6-pin connector on Climatronic airbox
T6b	6-pin connector on Climatronic airbox
T6c	6-pin connector on Climatronic airbox
T20	20-pin connector on Climatronic Control Module
T32a	32-pin Green connector on instrument cluster