

Light Switch

The following components are integrated with Light Switch -E1-:

- ◆ Fog Lamp Switch -E7-
- ◆ Headlamp Switch Illumination -L9-




Caution

- ◆ **Switch off all electrical consumers.**
- ◆ **Switch ignition off and remove ignition key.**
- ◆ **When removing and installing components in a visible area (switches, covers, trim, etc.), mask off the areas at which a prying tool (Trim Removal Wedge -VAS 3409-, screwdriver) will be positioned, using commercially available adhesive tape.**

Removing


- Turn the light switch rotary knob to the “0” position.
- Press the rotary knob in -arrow 1- and turn it slightly to the right -arrow 2-.
- Hold rotary knob in this position and remove light switch out from instrument panel in direction of -arrow 3-.

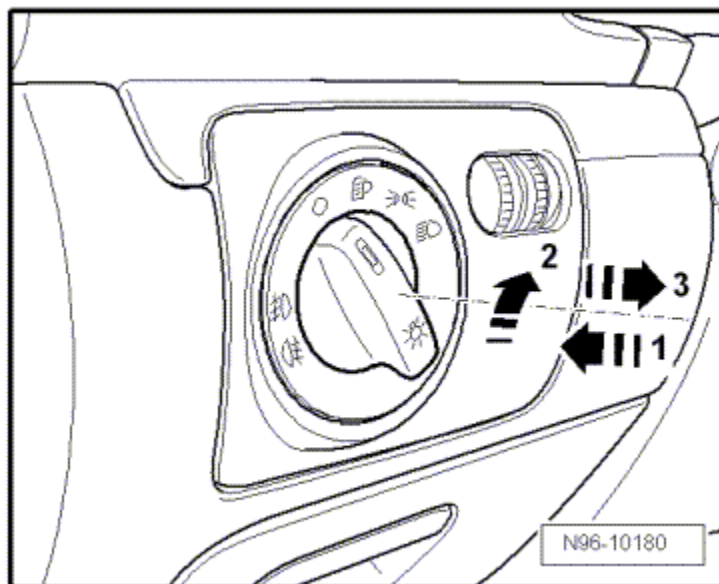

- Disconnect electrical connection -arrow-.

Installing

- Connect electrical connection.

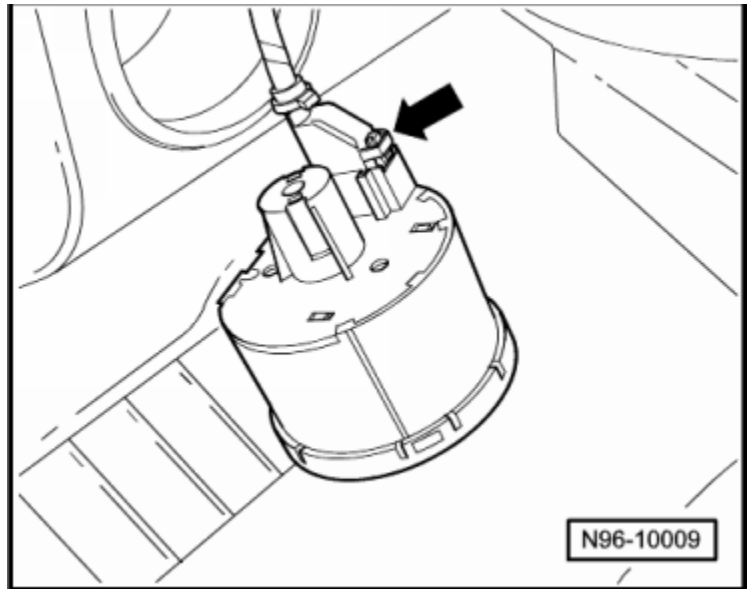

- Hold switch firmly and press in rotary knob - arrow 1- while turn slightly toward right -arrow 2-.
- Hold rotary knob in this position and insert switch into instrument panel -arrow 3-.
- Turn the rotary switch to the “0” position, release and engage the switch.

