

**2006 Volkswagen Maintenance Schedule by
Miles / Kilometers**



| | Miles | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 | |
|--|------------|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|
| | Kilometers | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 | 168 | |
| 1.8L Turbo, 1.9L TDI, 2.0L, 2.0L TFSI, 2.5L, 3.2L, 3.6L, 4.2L, 5.0L TDI 10 Cylinder, 6.0L W12 Engines | | | | | | | | | | | | | | | | | | | | | | | |
| Air Cleaner: Replace filter and Clean Housing | | | | | | | | | x | | | | | | | | x | | | | | | |
| Air Suspension: Check for damage or leaks (3.2L, 3.6L, 4.2L, 5.0L TDI only) | | | | | | | | | x | | | | | | | | x | | | | | | |
| Automatic Shift Lock: Check operation including park/neutral position switch | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Battery: Check | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Battery: Check (3.2L, 3.6L, 4.2L, 5.0L TDI, 6.0L W12 only) | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Brake System: Check for leaks/damage, break pad thickness, and brake fluid level | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Cooling System: Check coolant level: add if needed | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Diesel Particle Filter: Replace (5.0L TDI only) | | | | | | | | | | | | | | | | | | | | | | x | |
| Diesel Particle Filter: Check soot load measurement (5.0L TDI only) | | | | | | | | | | | | | x | | | | x | | | | | x | |
| Door Check Straps: Lubricate | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Dust & Pollen Filter: Replace (where applicable) | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Dust & Pollen Filter: Replace (3.6L, 5.0L TDI only) | | | | | | | | x | | | | | | | | x | | | | | | | |
| Drive Shafts: Check boots | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Engine: Change engine oil and oil filter (1.8L Turbo Only) | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x |
| Engine: Change engine oil and oil filter | x | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Engine: Check for leaks | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Exhaust System: Check for damage and leaks | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Front Axle: Check dust seals on ball joints and tie rod ends: Check tie rods | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Fuel Filter: Replace (TDI Engines Only) | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Haldex Clutch: Change Fluid (where applicable) | | | | | | | | x | | | | | | | | x | | | | | | | |
| Headlights: Check and adjust if needed | | | | x | | | | x | | | | x | | | | x | | | | | x | | |
| Interior/Exterior Lights: Check function (3.2L, 3.6L, 4.2L, 5.0L TDI, 6.0L W12 only) | | | | | | | | x | | | | | | | | x | | | | | | | |
| On-Board Diagnostic System: Check fault memory and erase if necessary | | | | x | | | | x | | | | x | | | | x | | | | | x | | |

2006 Volkswagen Maintenance Schedule by Miles / Kilometers



| | Miles | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 |
|---|------------|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | Kilometers | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 | 168 |
| Power Steering: Check fluid level (1.8L Turbo, 1.9L TDI, 2.0L, 3.6L, 4.2L only) | | | | | | | | | x | | | | | | | | x | | | | | |
| Power Steering: Check fluid level (4.2L, 5.0L TDI, 6.0L W12 only) | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Road test: Check kickdown, braking, steering, heating and ventilation, air conditioning, power accessories and electrical systems | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Rear Spoiler: Lubricate (New Beetle Only) | | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Service Interval Display: Reset (where applicable) | | x | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Spark Plugs: Replace (all engines except 2.0L TFSI, Touareg V8 and Phaeton V8) | | | | | | | | | x | | | | | | | | x | | | | | |
| Spark Plugs: Replace (2.0L TFSI, Touareg and Phaeton V8 4.2L, only) | | | | | | | | | | | | | x | | | | | | | | | |
| Sunroof Frame: Clean and lubricate | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Front sun roof drains: Open sun roof, check front water drains and clean if necessary | | | | | | | | | x | | | | | | | | x | | | | | |
| Timing Belt: Replace (1.9L TDI, Touareg and Phaeton V8 4.2L) | | | | | | | | | | | | | | | | | x | | | | | |
| Timing Belt: Check condition (1.8L, 2.0L, 2.0L TFSI) | | | | | | | | | | | | | x | | | | x | | | | | x |
| Tire Pressure Monitoring System Sensors: Check battery charge, replace wheel electronics and aluminum valve if necessary (where applicable) | | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Tires: Check condition, tread depth and adjust pressure if needed (including spare) | | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | |
| Transmission: Automatic: Check for leaks (1.8L Turbo, 1.9L TDI, 2.0L, 2.0L TFSI, 2.5L, 3.2L, 3.6L, 4.2L, 5.0L TDI, 6.0L W12 only) | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Transmission: Automatic: Check ATF and final drive (1.8L Turbo, 1.9L TDI, 2.0L, 2.0L TFSI, 2.5L, 3.2L, 3.6L only) | | | | | | | | | x | | | | | | | | x | | | | | |
| Transmission: Automatic: Check ATF (4.2L , 5.0L TDI only) | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Transmission: Automatic: Change ATF (6.0L W12 only) | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Transmission: Direct Shift (DSG): Check fluid (2.0L TFSI) | | | | | x | | | | x | | | | x | | | | x | | | | | x |
| Transmission: Direct Shift (DSG): Change fluid and filter (1.9L TDI, 2.0L TFSI, 2.5L only) | | | | | | | | | x | | | | | | | | x | | | | | |



2006 Volkswagen Maintenance Schedule by Miles / Kilometers

| | Miles | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 | |
|---|------------|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|
| | Kilometers | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 | 168 | |
| Transmission: Manual: Check oil level: add if needed: Check for leaks (1.8L Turbo, 1.9L TDI, 2.0L, 2.0L TFSI, 3.2L, 3.6L, 4.2L, 5.0L TDI only) | | | | | x | | | | x | | | | x | | | | x | | | | | x | |
| Underbody: Check for damage | | | | | | | | | x | | | | | | | | x | | | | | | |
| V-Belt / Ribbed belt: Check and adjust if needed | | | | | | | | | x | | | | | | | | x | | | | | | |
| Ribbed Belt Guide Rollers: Replace (Phaeton V8 4.2L only) | | | | | | | | | | | | | | | | | x | | | | | | |
| Water Separator: Drain (TDI Engines Only) | | x | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x |
| Wheels: Rotate front to rear | | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x |
| Wiper Blades: Check | | | | | | | | | x | | | | | | | | x | | | | | | |
| Windshield Washer Fluid: Check level: add if needed | | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x |
| <p>Every 12 months, regardless of mileage (kilometers): Perform visual check on airbag system</p> <p>Every 2 years, regardless of mileage (kilometers): Change brake fluid</p> <p>Every 2 years, or 20,000 miles (32,000 Kilometers), whichever occurs first: Check function of convertible top and check roll-over protection with convertible top open.</p> <p>Every 2 years, regardless of mileage (kilometers): Change dust and pollen filter.</p> <p>Every 4 years, regardless of mileage (kilometers): replace tire filler bottle in tire mobility kit (observe expiration date).</p> <p>Every 4 years, for vehicles driven less than 40,000 miles (60,000 kilometers) in 4 years: Replace Spark Plugs.</p> <p>Every 6 years, for vehicles driven less than 60,000 miles (90,000 kilometers) in 6 years: Change air filter element and clean housing.</p> <p>Every 6 years, regardless of mileage (kilometers): change tire pressure sensors.</p> <p>Every 6 years (for vehicles driven less than 60,000 miles (90,000 km) in 6 years (2.0L TFSI Only): Change Spark Plugs</p> | | | | | | | | | | | | | | | | | | | | | | | |

© 2010 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Revised: September 24, 2010