

Important information about transmission repair manuals To select a repair manual for a transmission, you need to know the transmission type.

The transmission manual you need is clearly identified by the transmission letter code

(GKB) on the vehicle's data carrier. Use this code to find out the transmission type, e.g. 01N, in the „Reference list“. Once you know the type, you can order the appropriate repair manual in the summary of results in erWin, e.g. „Selfdiagnosis for automatic transmissions 01N – 4-gear“.

GETRIEBETYP = Transmission types

GKB	Getriebeummer
2N	0132
2P	0139
2T	014L
2Y	020
3H	0944
3M	0131
3R	020
4J	0071
4R	020
4S	020
4T	020
4V	014B
4Z	009A
5B	020
5K	0084
5L	0085
5V	014F
6P	0945
8N	0851
8P	0852
8S	0854
9A	020
AAK	0946
AAP	0947
AAU	016V
ABB	091A
ABD	091B

GKB	Getriebeummer
ABE	091B
ABF	091C
ABH	091E
ABL	0941
ABM	0942
ABN	0942
ABR	0943
ABT	0937
ABV	0939
ABZ	01E1
ACD	020
ACS	0051
ACT	005B
ACW	091F
ADV	016Y
ADY	0161
ADZ	0161
AEE	0972
AEG	0973
AEH	0975
AEK	0977
AEL	0978
AEM	0978
AEN	020
AFA	0856
AFE	02A
AFF	02A

GKB	Getriebeummer
AFK	02G
AFL	02G
AGB	020
AGC	02A
AGF	01F1
AGK	02A
AGS	020
AGT	0949
AGZ	094A
AHD	0857
AHM	014K
AHT	094Z
AHZ	0856
AKD	018A
AKE	094C
AKK	094B
AKL	012
AKM	012
AKS	012
AKT	01A
AKU	01A
AKV	0841
AKW	084D
AKX	084E
AKY	084A
ALC	02A
ALD	091L
ALE	0948
ALK	0945
ALP	012
ALR	012
ALY	02A
AMC	020
AME	02CA
AMF	02C
AMK	012
AML	01A
AMN	016M
AMR	012
AMS	012A
AMW	01A
AMX	01A
AND	094D

GKB	Getriebeummer
ANZ	0977
AOB	016U
AOC	016U
AOD	012
AOE	012
AOF	0965
AOG	0966
AON	020
AOP	020
AOV	0087
AOW	0088
AOX	0086
AOZ	0087
APA	097A
APB	096
APC	0962
APD	0963
APE	0964
APF	091L
APL	012
APN	016L
APR	016N
APV	083C
APW	020
APX	016A
APY	084B
APZ	016Q
ARC	097A
ARF	02DB
ARK	02DA
ARL	02DC
ARN	0963
ARO	0965
ARV	01A
ARW	098
ARX	01E2
ASA	02A
ASB	02A
ASC	097B
ASD	02A
ASE	0088
ASL	0947
ASM	0942

GKB	Getriebeummer
ASP	0943
ASU	02C
ASY	02C
ASZ	01A
ATA	02A
ATB	02A
ATC	083H
ATG	012
ATH	020
ATR	012
ATT	097C
ATV	0854
ATX	02A
ATZ	009A
AUC	0082
AUD	0084
AUF	012
AUG	020
AUL	016Q
AUN	016U
AUR	016L
AUV	016P
AUY	083C
AUZ	083C
AVA	083H
AVC	083J
AVF	094B
AVG	094C
AVH	0945
AVJ	094A
AVM	0948
AVN	0946
AVR	0945
AVU	094D
AVV	0946
AVX	020
AWP	02C
AWR	02C
AWW	083K
AWY	020
AXA	012
AXC	012
AXD	012

GKB	Getriebeummer
AXE	012
AXF	012
AXG	012
AXH	012
AXJ	012
AXK	01A
AXL	01A
AXM	01A
AXN	01A
AXP	012
AXR	009B
AXU	098
AXV	098
AXW	098
AXX	098
AXY	098
AYC	02A
AYD	02B
AYE	02B
AYF	02B
AYG	02B
AYH	02A
AYK	02A
AYM	02A
AYN	02A
AYP	02A
AYR	02C
AYU	018C
AYZ	0851
AZB	0976
AZG	018D
AZZ	0978
BAA	012
CAA	012
CAB	01A
CAC	012
CAD	01AA
CAE	01D2
CAT	02A
CAX	0086
CAY	0087
CAZ	0088
CBA	02A

GKB	Getriebeummer
CBB	02C
CBC	02C
CBD	01EA
CBE	01F3
CBF	01F4
CBL	01EB
CBM	01EC
CBN	01ED
CBR	01AA
CBS	020
CBT	097A
CBU	097A
CBV	0976
CBW	0977
CBZ	0964
CCA	0965
CCE	012A
CCF	012
CCG	012N
CCH	01A
CCK	0852
CCM	02A
CCN	02DD
CCP	098
CCS	098
CCT	098
CCU	098
CCV	098
CCW	02B
CCX	02B
CCY	02B
CCZ	02B
CDA	02A
CDE	01F5
CDF	01D2
CDG	02CA
CDH	02C
CDJ	020
CDK	084G
CDM	02A
CDS	01K3
CDT	01K1
CDU	01K2

GKB	Getriebeummer
CDV	01A
CDX	012P
CDY	012
CEA	0977
CEB	0977
CEC	0852
CED	084B
CEE	0851
CEG	0852
CEH	0857
CEK	0854
CEL	084A
CEM	0856
CEN	0841
CEP	01E1
CER	012Q
CES	02A
CET	01EF
CEW	02A
CEX	02A
CEY	02A
CEZ	01F3
CFA	096
CFB	0962
CFC	096
CFD	096
CFF	096
CFH	096
CFK	096
CFR	0975
CFS	0976
CFT	0977
CFU	0977
CFV	0978
CFW	097A
CFX	097A
CFY	097C
CFZ	098
CGA	098
CGH	098
CGK	098
CGL	02CA
CGM	02CA

GKB	Getriebeummer
CGP	02A
CGR	01EG
CGS	012R
CGT	012S
CGU	012T
CGX	02A
CGY	02A
CHA	02A
CHB	020
CHC	020
CHD	020
CHE	020
CHG	0966
CHL	0858
CHN	02A
CHP	02B
CHR	02B
CHS	02B
CHT	02B
CHU	02A
CHV	02K
CHW	02KA
CHX	0852
CHY	098
CHZ	098
CJA	02A
CJD	01F5
CJE	01K2
CJF	020
CJP	01VA
CJQ	01V
CJR	01VA
CJS	01VA
CJT	01VA
CJU	01V
CJV	01V
CJW	01V
CJX	01V
CJY	01V
CJZ	01V
CKA	098
CKB	098
CKM	0851

GKB	Getriebeummer
CKR	0852
CKT	0857
CKU	01P
CKV	01P
CKX	01M
CKY	01M
CKZ	01M
CLB	01M
CLF	01N
CLH	01N
CLJ	085D
CLK	01M
CLN	01N
CLP	01N
CLR	01N
CLU	01P
CLV	01P
CLW	02DE
CLX	02DE
CLY	02DB
CLZ	02DC
CMA	012U
CMC	0851
CMG	01ED
CMH	001A
CMJ	001B
CMK	01K
CML	018D
CMN	01F5
CMR	012V
CMS	012W
CMZ	02A
CNA	02A
CNK	096
CNL	02A
CNU	0858
CNW	012A
CNX	012
CNY	012
CPA	012
CPB	012
CPC	012
CPD	012

GKB	Getriebeummer
CPE	012P
CPF	012Q
CPH	012S
CPK	012T
CPL	012U
CPM	01AA
CPN	01AA
CPR	01A
CPS	01AA
CPT	01A
CPU	01AA
CPV	02B
CPW	02B
CQB	020
CQE	01M
CQG	01M
CQH	01M
CRC	01K1
CRD	01K2
CRE	01K3
CRF	01F3
CRG	01F4
CRH	01F5
CRL	02B
CRM	02B
CRN	02B
CRP	02B
CRR	0965
CRU	02A
CRV	02DE
CRW	02DE
CRX	085
CRY	020
CSR	02C
CST	018D
CSU	01AA
CSV	012W
CSW	012W
CSX	012V
CSY	012V
CTA	01N
CTD	012
CTE	012

GKB	Getriebeummer
CTF	01AA
CTG	012
CTJ	012
CTL	098
CTM	02A
CTN	02A
CTT	02C
CTV	02DF
CUE	01L
CUF	01P
CUG	01P
CUH	01P
CUJ	01P
CUR	012
CUS	012Y
CUT	012
CUU	01AA
CUV	01P
CUW	01N
CUZ	012
CVB	012
CVC	012
CVD	012P
CVE	012
CVF	012S
CVT	01AA
CWC	01P
CWD	01P
CWE	01P
CWF	01P
CWG	01P
CWH	01P
CWL	085
CWM	0852
CWN	0856
CWP	0856
CWR	0858
CWS	0859
CWT	0859
CWU	085
CWV	085D
CWW	085
CWX	085C

GKB	Getriebeummer
CWY	012
CWZ	012
CXB	01M
CXF	01AA
CXU	01E3
CXV	006A
CXW	01AA
CXX	012
CXY	012
CXZ	01AA
CYA	01AA
CYB	01E
CYC	099A
CYE	099
CYF	099
CYH	01P
CYJ	01P
CYN	099
CYP	02A
CYR	01K1
CYS	01F3
CYT	01EJ
CYX	020
CYY	020
CYZ	020
CZA	02K
CZG	0854
CZK	02K
CZL	02J
CZM	02J
CZP	02C
CZR	02CA
CZW	01W
CZX	01AA
CZY	012
CZZ	012
DAA	01K2
DAB	01M
DAE	012
DAF	012
DAG	099
DAH	099
DBE	01A

GKB	Getriebeummer
DBL	01M
DBU	006
DBV	006
DBW	006
DBY	012
DBZ	02J
DCA	085
DCC	0854
DCD	0856
DCE	085
DCF	01K4
DCG	0859
DCH	0859
DCJ	085
DCK	085
DCL	02J
DCM	012
DCN	012
DCS	01V
DCT	0859
DCU	02B
DCV	02B
DCW	02B
DCX	02B
DCY	02DE
DCZ	02DE
DDA	02DF
DDB	012
DDG	020
DDH	085E
DDJ	0859
DDK	012
DDL	01AA
DDM	012
DDN	01AA
DDP	02C
DDR	020
DDS	01V
DDT	01V
DDU	012
DDX	0001
DDY	0001
DDZ	012

GKB	Getriebeummer
DEA	02J
DEB	085F
DED	085F
DEG	01M
DEH	01M
DEL	0001
DEM	012
DEN	01W
DEP	01V
DEQ	01V
DER	012
DES	01V
DEU	01V
DEV	01VA
DEW	01VA
DEX	01VA
DEY	01VA
DFG	01N
DFH	01N
DFJ	01N
DFK	01N
DFL	01N
DFM	01N
DFN	020
DFP	020
DFQ	020
DFR	020
DFW	020
DFX	020
DGE	020
DGF	020
DGG	020
DGH	020
DGK	020
DGL	02K
DGM	02K
DGT	020
DGU	01EC
DGV	01EA
DGW	01AA
DHB	085E
DHC	012
DHD	012

GKB	Getriebeummer
DHE	012
DHF	012
DHG	012
DHH	012
DHJ	012
DHK	012
DHL	012
DHM	012
DHN	012
DHP	012Q
DHR	012Q
DHS	012U
DHT	012Y
DHU	012
DHV	012
DHW	012
DHX	012
DHY	012
DHZ	012
DJA	012
DJB	012
DJE	012
DJF	01AA
DJG	01A
DJJ	01AA
DJK	01A
DJN	01AA
DJP	01AA
DJR	01AA
DJS	01AA
DJT	01A
DJU	01AA
DJV	01AA
DJY	006
DJZ	02B
DKA	02B
DKB	01VA
DKC	0851
DKE	0859
DKF	085E
DKG	0857
DKR	01M
DKS	01M

GKB	Getriebeummer
DKT	01P
DKU	006
DKW	0001
DKX	0001
DKY	0001
DKZ	0001
DLA	0001
DLB	0001
DLC	0001
DLD	0001
DLE	004A
DLL	01M
DLM	01P
DLP	02K
DLR	01M
DLS	01M
DLT	01M
DLU	01M
DLV	01M
DLW	01M
DLX	01M
DLY	01M
DLZ	01M
DMA	01M
DMB	01M
DMC	01M
DMD	01M
DMF	01M
DMG	01M
DMJ	01M
DML	01P
DMM	020
DMN	01M
DMP	01M
DMQ	01M
DMS	01M
DMT	01M
DMU	01N
DMV	01N
DMX	01N
DNA	01P
DNB	01P
DNC	01P

GKB	Getriebeummer
DND	01P
DNE	01P
DNF	01P
DNJ	099A
DNL	099
DNM	099
DNN	099
DNP	099
DNR	01M
DNS	01M
DNT	01M
DNZ	02K
DPA	02A
DPB	001C
DPF	012
DPG	01EF
DPH	01EB
DPJ	01EJ
DPK	01E2
DPL	01E3
DPN	001A
DPP	001B
DPQ	001C
DPS	01V
DPT	01VA
DPU	02CA
DPV	01E
DPW	01EK
DPX	0859
DPZ	01L
DQB	02MA
DQD	01M
DQE	01M
DQG	02B
DQH	02B
DQJ	02B
DQK	02B
DQL	02B
DQM	02B
DQN	02DE
DQP	02DE
DQQ	02DF
DQR	02G

GKB	Getriebeummer
DQS	01E
DQT	01EA
DQU	02B
DQV	02DE
DQW	085E
DQY	02J
DRA	01P
DRC	085
DRD	01V
DRF	01V
DRG	01P
DRH	02GA
DRK	01VA
DRN	01VA
DRP	02MA
DRV	02MA
DRW	02M
DRZ	02K
DSB	02K
DSC	012
DSE	01E
DSF	02J
DSG	02J
DSJ	01V
DSK	085D
DSL	01L
DSM	01L
DSP	085C
DSQ	0859
DSR	099
DSS	01V
DST	01VA
DSU	01M
DSY	01EA
DTA	02J
DTB	01M
DTC	099
DTD	01L
DTE	01L
DTH	01M
DTK	02J
DTR	006
DTT	01AA

GKB	Getriebeummer
DTU	01VA
DTV	01VA
DTX	085H
DUE	02J
DUH	02B
DUJ	02B
DUK	012
DUL	01V
DUM	01V
DUS	02K
DUU	02K
DUV	02K
DUW	02K
DUX	01AA
DUY	085E
DVD	01M
DVG	01M
DVH	01M
DVJ	01M
DVK	01M
DVM	002
DVN	012
DVP	012
DVQ	012
DVR	012
DVS	012
DVT	012
DVV	012U
DVW	012
DVX	012
DVZ	012
DWA	012
DWB	012
DWD	012
DWE	012
DWF	012
DWG	012
DWH	012
DWJ	012
DWK	012
DWM	01AA
DWN	01AA
DWP	01AA

GKB	Getriebeummer
DWQ	01AA
DWR	01AA
DWT	002
DWX	01M
DWY	085
DWZ	0851
DXB	085
DXC	085
DXD	0857
DXE	0859
DXF	0859
DXG	0859
DXH	0859
DXJ	085C
DXK	085
DXL	085
DXM	085C
DXN	085
DXP	085E
DXQ	085F
DXS	01P
DXV	01V
DXW	02MA
DXY	020
DXZ	02G
DYA	02G
DYB	012
DYC	01AA
DYD	01AA
DYE	01AA
DYF	085
DYH	085
DYM	01L
DYN	02J
DYP	02J
DYQ	01M
DZC	02J
DZF	02J
DZK	02J
DZL	02J
DZN	01JB
DZQ	02J
EAA	012

GKB	Getriebeummer
EAB	012
EAC	012
EAD	01W
EAE	012
EAG	02C
EAH	02C
EAJ	02CA
EAR	001B
EAS	001B
EAT	001C
EAU	001C
EAW	001E
EAY	02K
EAZ	02K
EBA	02J
EBB	099
EBD	02J
EBF	02J
EBJ	02J
EBM	02J
EBN	02J
EBP	02J
EBQ	02J
EBS	02J
EBT	01M
EBU	01V
EBV	01V
EBW	01V
EBX	01V
EBY	01V
EBZ	01V
ECA	01V
ECB	01VA
ECC	01VA
ECD	01VA
ECE	01VA
ECF	01L
ECG	01V
ECH	01VA
ECJ	01V
ECK	01M
ECL	01M
ECM	01M

GKB	Getriebeummer
ECN	01M
ECP	01M
ECQ	01M
ECR	01M
ECT	01M
ECU	01M
ECV	01M
ECW	02J
ECX	01L
ECY	01L
ECZ	01L
EDC	01V
EDE	01V
EDF	01VA
EDG	01L
EDJ	02M
EDU	01EA
EEA	02J
EEB	09A
EEC	09A
EED	09A
EEE	09A
EEF	09A
EEJ	02MA
EEK	01V
EEL	01V
EEN	012
EEP	01AA
EEY	01EA
EEZ	02G
EFA	02GA
EFB	01M
EFC	01AA
EFF	02M
EFG	02J
EFL	006
EFM	002E
EFN	01L
EFP	01V
EFQ	01VA
EFR	01V
EFY	02MA
EGA	01VA

GKB	Getriebeummer
EGB	02J
EGC	02J
EGD	02J
EGF	02J
EGP	09A
EGQ	09A
EGR	02J
EGS	02J
EGT	02J
EGU	02J
EGV	02J
EGW	02J
EGX	02J
EGY	02J
EGZ	02J
EHA	02J
EHB	02J
EHC	02J
EHD	001B
EHE	001C
EHH	02N
EHJ	02N
EHL	02N
EHM	02Na
EHN	02J
EHQ	02CA
EHS	01EA
EHT	01EA
EHV	012
EHW	01EA
EJH	02K
EJL	02KA
EJN	02KA
EJP	020
EJR	020
EJS	020
EJT	020
EKC	01V
EKD	01VA
EKG	02J
EKH	02J
EKL	01E5
EKM	01EA

GKB	Getriebeummer
EKN	01E
EKP	01V
EKU	02J
EKV	02J
EKW	02J
EKX	01VA
EKY	085
ELA	01V
ELB	01V
ELC	01V
ELD	09A
ELF	01V
ELG	02J
ELH	01M
ELK	01V
ELN	01E
ELP	01E
ELQ	01E
ELS	01M
ELT	01M
ELU	01M
ELV	01M
ELW	01M
ELX	01M
ELY	01M
ELZ	01M
EMA	01V
EME	02G
EMF	02G
EMG	012
EMK	01V
EMM	01VA
EMP	01VA
EMQ	01VA
EMR	02J
EMS	02J
EMT	02J
EMV	012
ENA	085D
ENC	01AA
ENH	02J
ENJ	02J
ENK	01EA

GKB	Getriebeummer
ENL	012
ENM	012
ENN	012
ENP	01AA
ENQ	012
ENU	01E
ENV	01EA
ENW	012
ENZ	01M
EPA	01M
EPB	01M
EPC	01M
EPD	01M
EPG	01M
EPH	01M
EPJ	01M
EPK	01M
EPL	01M
EPM	01M
EPN	01M
EPP	01M
EPR	01M
EPS	01M
EPT	01N
EPU	01N
EPV	01N
EPX	01N
EPY	01N
EQB	01P
EQD	01P
EQE	01P
EQF	01P
EQG	01P
EQH	01P
EQJ	01P
EQK	099A
EQL	099
EQM	099
EQN	099
EQP	099
EQR	099
EQS	099
EQT	099

GKB	Getriebeummer
EQV	085
EQW	0857
EQX	0859
EQY	0859
EQZ	0859
ERA	085
ERB	085
ERC	085
ERD	085E
ERE	02MA
ERF	02M
ERG	02MA
ERK	02Na
ERL	02Na
ERM	02N
ERQ	01M
ERR	02M
ERS	02J
ERT	02K
ERW	02C
ERX	01M
ERY	01V
ERZ	001C
ESA	001A
ESB	01M
ESE	01M
ESF	01M
ESH	01M
ESJ	01M
ESK	001
ESL	001
ESM	01V
ESN	01V
ESP	02J
ESV	02J
ESW	02MA
ESX	01L
ESY	0857
ESZ	0859
ETA	0859
ETB	085C
ETC	085C
ETD	085E

GKB	Getriebeummer
ETE	085E
ETF	085F
ETG	085H
ETH	01EA
ETJ	01EA
ETK	01V
ETL	01V
ETM	01VA
ETN	01VA
ETU	01V
ETV	01V
ETW	01V
ETX	01VA
ETY	01VA
ETZ	01V
EUA	01VA
EUH	02J
EUJ	02M
EUQ	02J
EUW	02J
EUY	085D
EVM	01JA
EVQ	02J
EVR	02J
EVS	02J
EVU	02B
EVV	02B
EVW	02B
EVX	02B
EVY	02B
EVZ	02B
EWA	02B
EWB	02B
EWK	02DE
EWC	02DE
EWD	02DE
EWG	02C
EWJ	02C
EWK	02C
EWL	02C
EWN	02C
EWQ	02J
EWR	02R

GKB	Getriebeummer
EWT	02R
EWU	02J
EWV	02J
EWW	02J
EWX	02J
EWY	02J
EWZ	02J
EXA	02J
EXB	02J
EXC	01E
EXD	02J
EXE	02J
EXF	0001
EXG	0001
EXH	0001
EXJ	0001
EXK	0001
EXL	09D
EXN	09D
EXP	09D
EXQ	09D
EXR	09D
EYD	02J
EYF	01V
EYH	01AA
EYJ	01VA
EYK	01VA
EYM	09A
EYN	09A
EYP	09A
EYQ	012
EYX	02T
EYZ	01E
EZA	02N
EZB	01VA
EZF	01JH
EZG	012
EZH	02J
EZK	02J
EZM	012
EZN	01JB
EZP	01V
EZR	01V

GKB	Getriebeummer
EZS	01V
EZV	01V
EZW	01V
EZX	01V
EZY	01V
EZZ	01V
FAB	01V
FAD	01V
FAE	01V
FAF	01V
FAH	01V
FAJ	01V
FAK	01V
FAL	01VA
FAM	01VA
FAN	01VA
FAP	01VA
FAQ	01VA
FAR	01VA
FAS	01VA
FAT	01VA
FAU	01VA
FAV	01VA
FAW	01VA
FAX	01VA
FAY	01VA
FAZ	01VA
FBA	01VA
FBB	01VA
FBC	01L
FBD	01L
FBE	01L
FBF	01L
FBG	01L
FBH	01L
FBJ	01L
FBK	02J
FBL	02J
FBN	09B
FBP	09B
FBQ	09B
FBS	02MA
FBV	02J

GKB	Getriebeummer
FBW	02J
FBX	02J
FBY	02J
FCB	12
FCF	02J
FCH	02J
FCJ	02J
FCK	02J
FCP	01EA
FCQ	01E
FCR	01E
FCS	09D
FCT	02T
FCU	02T
FCV	02T
FCZ	01M
FDA	01M
FDB	01M
FDC	01M
FDD	01M
FDE	01M
FDF	01M
FDG	01M
FDH	01M
FDJ	01M
FDK	01M
FDM	02T
FDN	02T
FDO	01M
FDP	01EA
FDS	02J
FDU	02J
FDV	02T
FDY	0856
FDZ	08D
FEA	08D
FEC	012
FED	01V
FEE	01V
FEF	01VA
FEG	01VA
FEJ	01VA
FEK	02MA

GKB	Getriebeummer
FEL	02MA
FEM	02MA
FEP	01VA
FEQ	01VA
FER	01VA
FEV	01V
FEW	02CA
FEX	02CA
FFC	085
FFH	085
FFJ	085
FFK	085
FFN	085
FFP	085
FFQ	085D
FFT	085D
FFU	085D
FFV	085
FFX	085
FGA	09A
FGE	01L
FGM	02N
FGS	01L
FGY	01EA
FGZ	01EA
FHA	02MA
FHB	02MA
FHC	02MA
FHE	02T
FHF	01VA
FHG	01VA
FHH	01VA
FHJ	01VA
FHL	012
FHN	012
FHU	02Na
FHV	01V
FHY	085
FJA	085
FJB	085
FJC	085D
FJD	085D
FJE	085D

GKB	Getriebeummer
FJF	02N
FJG	02N
FJH	02Z
FJJ	02Z
FJK	02Z
FJL	02Z
FJM	02Z
FJN	02Z
FJP	012
FJS	02G
FJU	012
FJV	01AA
FLC	01VA
FLD	08D
FLE	085D
FLU	02T
FLV	01VA
FLX	09B
FLY	09B
FLZ	09B
FMH	02M
FML	02M
FMN	02MA
FMP	02MA
FMQ	02MA
FMR	02MA
FMS	02MA
FMT	02MA
FMU	02MA
FMV	01N
FMX	02T
FMZ	02N
FNA	02N
FNB	02SA
FND	02S
FNE	0A4
FNG	02S
FNL	01V
FNM	01VA
FNN	0A5A
FNP	0A5A
FNQ	0A5
FNT	02T

GKB	Getriebeummer
FNU	01AA
FPE	02N
FPG	02N
FPH	02N
FPJ	02N
FPK	02Na
FPL	02Na
FPN	01E
FPP	01EA
FPS	012
FPT	01AA
FPW	01EA
FPX	01V
FPY	01V
FQA	0A5A
FQD	02T
FQE	02T
FQF	02SA
FQL	02J
FQM	01E
FQU	01VA
FQV	01VA
FRA	02T
FRE	01EA
FRF	01E
FRG	01E
FRJ	01E
FRK	01E
FRL	01E
FRM	01E
FRN	01EA
FRP	01EA
FRQ	01EA
FRR	01EA
FRS	012
FRT	01V
FRU	01VA
FSM	0A8
FSN	012
FSP	02T
FSR	02M
FSS	02U
FST	09A

GKB	Getriebeummer
FSY	01VA
FSZ	01VA
FTA	01VA
FTF	01EA
FTG	01EA
FTH	01EA
FTJ	01EA
FTK	01EA
FTL	01EA
FTM	01EA
FTN	01EA
FTP	01EA
FTQ	01EA
FTR	01EA
FTS	01EA
FTT	01EA
FTU	01EA
FTV	02G
FTW	012
FTX	012
FTY	012
FTZ	01AA
FUH	09G
FUJ	09G
FUK	01L
FUL	01L
FUM	01L
FUN	01L
FUP	02Q
FUQ	02QA
FUT	02U
FUU	01L
FUV	02Na
FUW	02Na
FUX	02N
FUY	02N
FUZ	02N
FVA	02N
FVB	02N
FVC	01VA
FVE	01VA
FVF	0AH
FVG	0AJ

GKB	Getriebeummer
FVH	0AF
FVP	02N
FVQ	02N
FVR	02N
FVS	02T
FVT	02T
FVU	02T
FVW	02K
FWJ	01E
FWX	01VA
FWZ	02QA
FXF	01VA
FXL	01VA
FXP	02T
FXQ	0AF
FXR	012
FXV	0A5
FXW	0A5A
FXX	0A5A
FYF	01EA
FYG	02S
FYH	02T
FYK	02T
FYL	09A
FYM	09A
FYN	09A
FYP	09A
FYQ	09B
FYR	09B
FYT	01EA
FZL	02MA
FZM	02MA
FZN	02MA
FZP	02MA
FZQ	02M
FZR	02M
FZS	0AH
FZT	0AH
FZU	0AH
FZV	01EA
FZW	01EA
FZY	01EA
GAJ	0AG

GKB	Getriebeummer
GAK	01VA
GAY	02E
GAZ	01E
GBA	01E
GBB	01EA
GBC	01EA
GBD	01EA
GBE	01EA
GBF	01VA
GBG	01VA
GBH	01VA
GBJ	01VA
GBK	012
GBL	012
GBM	012
GBN	012
GBP	012
GBQ	012
GBR	012
GBS	012
GBT	01AA
GBV	02J
GBZ	02T
GCD	02T
GCF	09EA
GCU	001
GCV	09F
GDA	01EA
GDE	01V
GDG	02T
GDH	02T
GDJ	02T
GDL	02T
GDM	02T
GDN	02T
GDP	02T
GDQ	02T
GDR	02T
GDS	02CA
GDT	012
GDU	01AA
GDZ	01EA
GEA	01E

GKB	Getriebeummer
GEF	02T
GEJ	02T
GEL	02T
GEM	02T
GEP	02T
GEQ	02T
GER	02T
GES	02T
GET	02T
GEU	02T
GEV	02T
GEW	02T
GEZ	02U
GFK	012
GFL	012
GFN	012
GFQ	012
GFR	012
GFS	012
GFY	012
GFZ	012
GGB	012
GGE	012
GGF	012
GGH	01AA
GGK	01AA
GGM	01AA
GGN	01AA
GGU	02R
GGV	02R
GGZ	09G
GHA	0A2
GHB	09EA
GHE	09G
GHG	02E
GJB	0AJ
GJC	0AF
GJD	0AF
GJF	001
GJG	001
GJX	09G
GJZ	09G
GKA	09G

GKB	Getriebeummer
GKB	09G
GKC	09G
GKF	02E
GKG	09F
GKJ	02T
GKL	02T
GKN	02T
GKP	02T
GKR	02T
GKS	02T
GKT	02T
GKU	02T
GKV	02T
GKW	02T
GKY	09EA
GLA	01L
GLB	02S
GLC	09D
GLD	09D
GLE	09D
GLH	09D
GLJ	09D
GLK	09D
GLW	02T
GLX	01EA
GMF	09K
GMG	09K
GMH	09K
GMK	09L
GML	01V
GMR	01V
GMS	02Z
GMT	0AJ
GMU	01E
GMW	0AG
GND	09EA
GNE	02Q
GNT	09EA
GNU	09EA
GNY	09A
GNZ	09A
GPA	09A
GPB	09A

GKB	Getriebeummer
GPC	09A
GPD	09A
GPE	09B
GPF	02U
GPG	09B
GPH	09B
GPK	02J
GPM	0AH
GPN	0AJ
GPQ	02E
GPR	09L
GPS	02S
GPU	02E
GPV	02E
GPW	02E
GPX	02E
GQA	02E
GQE	09EA
GQF	09EA
GQG	0AJ
GQL	02S
GQM	02S
GQN	02S
GQP	02S
GQQ	0A4
GQR	0A4
GQT	02MA
GQV	02MA
GQW	02Z
GQX	02Z
GQY	02Z
GQZ	02Z
GRA	02Z
GRB	02Z
GRC	02Z
GRD	01E
GRF	02Q
GRN	09F
GRP	02T
GRQ	02T
GRS	02T
GRU	02T
GRX	02T

GKB	Getriebeummer
GRY	02T
GRZ	02T
GSA	02T
GSB	02T
GSD	02T
GSE	02T
GSF	02T
GSH	02T
GSJ	02T
GSN	02U
GSS	02E
GST	02E
GSU	02SA
GSY	09G
GTB	0A4
GTK	09D
GTV	02Z
GTW	02Z
GTX	02Z
GTY	02Z
GTZ	02Z
GUA	02Z
GUB	02Z
GUG	0AH
GUH	09L
GUJ	09D
GUK	09L
GUL	09L
GUM	02QA
GUP	01VA
GUV	09L
GUW	09L
GVH	09F
GVJ	09D
GVS	01E
GVT	02Q
GVV	0AG
GVW	0AJ
GVX	02U
GVY	0AF
GVZ	02R
GWB	0A5
GWC	0A5

GKB	Getriebeummer
GX	084A
GXB	08D
GXC	02Q
GXV	02S
GXX	01L
GXY	09G
GXZ	0AH
GXD	02E
GYM	02E
GYN	02E
GYP	02E
GYQ	02E
GYR	02E
GYS	02E
GZH	09D
GZU	09L
HAG	02E
HAM	09D
HAN	09D
HAO	09D
HAP	09D
HAQ	09D
HAR	09D
HAU	09D
HBJ	0AJ
HBK	02U
HBL	0AJ
HBM	0AG
HBN	02K
HBP	02E
HBQ	02E
HBR	02E
HCD	09K
HCE	09K
HCM	0AF
HCN	01EA
HCS	02T
HCW	02Z
HD	0936
HDC	02Z
HDD	02E
HDN	09G
HDQ	09F

GKB	Getriebeummer
HDR	0A4
HDS	0A8
HDT	02T
HDU	02Q
HDV	02Q
HEL	09L
HEM	09L
HEN	0A2
HEP	0AF
HET	02R
HEU	0AG
HFN	0AH
HFP	0AF
HFQ	02E
HFR	09G
HFS	09G
HFT	09G
HFU	09G
HFX	09G
HFZ	09G
HGA	09G
HGC	09K
HGD	09K
HGE	09K
HGG	02S
HGN	0A4
HGR	0A4
HGW	02R
HGX	02R
HGY	02R
HHG	09G
HHN	0AF
HHP	09G
HHQ	01E
HHX	0A5
HJE	0A4
HJM	02SA
HJN	02SA
HJP	02E
HJR	02QA
HJS	02QA
HJT	02QA
HJW	02QA

GKB	Getriebeummer
HJX	02QA
HKN	09L
HKP	09L
HKQ	09L
HKR	09L
HLE	02E
HLG	02E
HLH	02E
HLJ	02E
HLP	09G
HMD	09G
HNC	0A5A
HND	0A5A
HNE	0A5A
HNF	0A5A
HNV	0A4
HPB	0AJ
HPE	0A2
HPG	09D
HPH	09D
HPS	09F
HPT	09F
HQF	02E
HQG	02E
HQH	02E
HQK	02E
HQL	02E
HQM	02E
HQN	02E
HQP	02E
HRL	09L
HRM	09G
HRN	09G
HRW	02E
HSL	0A2
HTB	02E
HTN	09G
HTQ	09G
HTU	09G
HUS	02E
HUT	02E
HVS	02Q
HVU	02R

GKB	Getriebeummer
HVV	02E
HVW	09G
HVX	09G
HWY	02R
HXG	09D
HXJ	09G
HXK	09G
HXS	02E
HXT	02E
HXU	02E
HXV	02E
HXX	02E
HYC	02E
HYV	09L
HYW	09L
HYX	09L
HYY	09L
HZH	02E
HZU	09D
HZV	09D
HZW	09D
HZX	09D
HZY	09D
JAU	02S
JAZ	09L
JBH	02N
JBJ	02N
JBK	02N
JBL	02N
JBM	02N
JBN	02N
JBP	02NA
JBQ	02NA
JBR	09D
KAA	0895
KAD	0898
KAF	089B
KAH	0898
KAL	089E
KAR	089C
KAS	089H
KAU	089C
KAW	089G

GKB	Getriebeummer
KAX	089F
LT	0153
LZ	0153
NH	0904
NHC	0A5A
NJ	0905
NK	0904
NL	0906
RBD	087E
RBE	087F
RBH	087H
RBL	087G
RBP	087S
REA	0878
REB	0879
REC	087C
RED	087L
REE	087L
REG	087Q
REH	087Q
ST	0081
SU	0082
SV	0083
SW	0084
SX	0081
SY	0082
SZ	0083
T	002
TJ	0105
TJA	0105
TJB	010C
TJC	0105
TJD	0105
TJE	010C
TJF	010C
TK	0107
TKA	0107
TL	0108
TLB	0108
TN	010B
TNA	010B
TNC	010B
UH	016B

GKB	Getriebeummer
V	002
W	002
WB	0051
WD	005A
WE	005B
X	002
Y	002