

Procedure after changing dash panel insert (Adaption)

Immobilizer III

Notes:

- ◆ To prevent confusion and false entries, determine the 14-position identification number of the dash panel insert only by interrogating the control unit version with fault reader V.A.G 1551. Then use the identification number to request the 4-digit secret number from the respective service centre or importer required for adaption.
- ◆ If only the dash panel insert is renewed, the secret number of the old dash panel insert must be used for adaption. If all components are renewed, use the secret number of the new dash panel insert.
- ◆ Every dash panel insert is assigned its own secret number.

Prerequisites

Authorized ignition key available.

- Insert old (authorized) key in the ignition lock.
- Connect fault reader V.A.G 1551, switch on ignition, select operating mode 1 "Rapid data transfer" and enter address word 17 "dash panel insert".

3B0920845 COMBI + IMMOBIL.	VDO	X07	
Coding 21115	WSC		00000

⇒ Indicated on display:

- ◆ Top linePart No. of control unit³)System designation(Combi instrument) Manufacturer's code:
VDO = VDO
Version number
- ◆ Lower lineCode number¹)Dealership number²)

1)- Dependent on engine, gearbox and additional equipment

2)- Will be automatically stored in the control unit when entering the system, but not when coding control units which have been used.

- Press ⇒ key.

XXXXXXXXXXXXXXXXXX	VWZ1Z0Y0371425
--------------------	----------------

⇒ Indicated on display:

◆ Top line Chassis number,(17 digit, WVW....) Identification number,(14 digit, VW....)

Only place holders are displayed in place of vehicle number prior to adaption of new immobilizer control units.

- Press ⇒ key.

Rapid data transfer Select function XX	HELP
-------------------------------------------	------

⇔ Indicated on display:

- Press key 1 twice. (11 selects the "Login procedure" function.)

Rapid data transfer 11 - Login procedure	Q
---------------------------------------------	---

⇔ Indicated on display:

- Confirm entry with key Q.

Login procedure Enter code number XXXXX	Q
--------------------------------------------	---

⇔ Indicated on display:

- Enter secret number of new dash panel insert; when doing this, place a 0 before the 4-digit number (e.g. 01915).

- Confirm entry with key Q.

Note:

Function is unknown or cannot be carried out at the moment ⇒

⇐ If the following display appears:

- ◆ Secret number is not accepted. Enter again.

Rapid data transfer
Select function XX HELP

⇐ Indicated on display:

- Press keys 1 and 0. (10 selects the "Adaption" (matching) function.)

Rapid data transfer
10 - Adaption Q

⇐ Indicated on display:

- Confirm entry with key Q.

Adaption
Enter channel number XX

⇐ Indicated on display:

- Press keys 5 and 0. (50 selects "Channel 50".)
- Confirm entry with key Q.

Channel 50 Adaption 32000
Pin ? ⇒

⇐ Indicated on display:

- Press ⇒ key.

Channel 50 Adaption 32000 Q
Enter adaption value XXXXX

⇐ Indicated on display:

- Enter secret number of old dash panel insert; when doing this, place a 0 before the 4-digit number (e.g. 01915).
- Confirm entry with key Q.

Notes:

Function is unknown or cannot be carried out at the moment ⇒

⇐ If the following display appears:

- ◆ Secret number is not accepted. Enter again.
- ◆ 3 attempts to enter the secret number are possible immediately, the next 3 attempts are only permitted after a minimum of 10 minutes if the ignition remains switched on during this time and the

self-diagnosis is exited via the function 06 "End output".

- ◆ The waiting period between each 3 attempts doubles each time up to a maximum of 255 minutes.

Channel 50	Adaption	32000
------------	----------	-------

⇐ Indicated on display:

Channel 50 Wait	Adaption	32000
--------------------	----------	-------

Channel 50 WVWZZZ3BZ1W0000273	Adaption	3200	Q
----------------------------------	----------	------	---

⇐ Indicated on display:

After successful adaption, vehicle identification number will be indicated in lower line of display.

- Confirm entry with key Q.

Channel 50 Store changed value?	Adaption	32000
------------------------------------	----------	-------

⇐ Indicated on display:

- Confirm entry with key Q.

Channel 50 Changed value is stored	Adaption	32000
---------------------------------------	----------	-------

⇐ Indicated on display:

- Press ⇒ key.

Rapid data transfer Select function XX	HELP
-------------------------------------------	------

⇐ Indicated on display:

- Switch off ignition
- Switch ignition on again within 60 seconds.
- Adapt all ignition keys

Adapting ignition keys

Notes:

- ◆ If new or additional ignition keys are required they must be adapted to the immobilizer control unit.
- ◆ The ignition keys for the immobilizer described here are marked with a "W"!
- ◆ Note procedure when changing the locking set and the immobilizer control unit.
- ◆ The adaption procedure must always be carried out for all the ignition keys, including the existing ones.
- ◆ The number of keys already adapted will be displayed when the adaption function is selected.
- ◆ If only one key is adapted, the vehicle can be started immediately with this key. If more than one key has been adapted, the vehicle can only be started immediately with the last key adapted.
- ◆ The adaption procedure can be interrupted by pressing the C key on the V.A.G 1551.

Warning!

The V.A.G 1551 dealership number (workshop code) will be stored in immobilizer control unit when adapting ignition keys.

Prerequisites

- ◆ All ignition keys available. If no old ignition key is available see "Lost key procedure", =>page [01-388](#).
 - ◆ Secret number is available; if not see "Establishing secret number", =>page [01-388](#).
- Insert correct profile ignition key in the ignition lock.
- Connect fault reader V.A.G 1551, select operating mode 1 "Rapid data transfer", switch on ignition and enter address word 17 "Dash panel insert".

After displaying the immobilizer identification:

- Press ⇒ key.

Rapid data transfer
Select function XX HELP

⇔ Indicated on display:

- Press key 1 twice. (11 selects the "Login procedure" function.)

Rapid data transfer
11 - Login procedure Q

⇔ Indicated on display:

- Confirm entry with Q key.

Login procedure
Enter code number XXXXX Q

⇔ Indicated on display:

- Enter secret number, when doing this place a 0 before the 4 digit number (e.g. 01915).

- Confirm entry with key Q.

Rapid data transfer
Select function XX HELP

⇔ Indicated on display:

Notes:

*Function is unknown or
cannot be carried out at the moment* ⇒

⇔ If the following display appears:

◆ Secret number is not accepted. Enter again.

◆ 3 attempts to enter the secret number are possible immediately, the next 3 attempts are only permitted after a minimum of 10 minutes if the ignition remains switched on during this time and the self-diagnosis is exited via the function 06 "End output".

◆ The waiting period between each 3 attempts doubles each time up to a maximum of 255 minutes.

- Press keys 1 and 0. (10 selects the "Adaption" function.)

Rapid data transfer
10 - Adaption Q

⇔ Indicated on display:

- Confirm entry with key Q.

Adaption
Enter channel number XX

- ⇔ Indicated on display:
- Press keys 2 and 1. ("channel 21" is selected with 21.)
 - Confirm entry with key Q.

Function is unknown or cannot be carried out at the moment ⇒

- ⇔ If the following display appears:
- Repeat adaption by entering secret number.

Channel 21.....Adaption 2 ⇒

⇔ Indicated on display:

The top line of the display shows that 2 ignition keys are adapted to the system.

- Press ⇒ key.

Channel 21.....Adaption 2 ⇒
Enter adaption value XXXXX

⇔ Indicated on display:

- Press the 0 key four times and then enter the number of all ignition keys to be adapted, including the existing key, (e.g. 00003); max. possible Qty. 8.
- Confirm entry with key Q.

Channel 21 Adaption 3 Q

⇔ Indicated on display for 3 ignition keys to be adapted:

- Confirm entry with key Q.

Channel 21 Adaption 3 Q
Store amended value?

⇔ Indicated on display:

- Confirm entry with key Q.

Channel 21 Adaption 3 ⇒
Amended value is stored

⇔ Indicated on display:

Dash panel insert VDO:

The warning lamp K117 goes out.

The key in ignition/starter lock is now adapted.

- Press ⇒ key.
- Switch off ignition.
- Insert next key in ignition/starter lock and switch on ignition again.

The warning lamp K117 lights up for approx. 2 seconds and then goes out.

- As soon as immobilizer warning lamp -K117- in dash panel insert goes out, switch ignition off again.
- Repeat this procedure until all keys are adapted.

After the last ignition key is adapted, the warning lamp -K117- flashes once briefly signifying the adaption sequence is completed.

Notes:

- ◆ If the warning lamp flashes the key adaption is faulty and must be performed again.
- ◆ If longer than 60 seconds is taken when all keys are being matched, the warning lamp will flash quickly; the time is not registered when the ignition is switched off.

The adaption of ignition keys is automatically terminated when:

- ◆ number of keys to be adapted is reached.
 - ◆ an already adapted key is used to switch on the ignition again and the ignition remains switched on for longer than 1 second (fault is stored)
 - ◆ Permitted adaption period of 60 seconds is exceeded (fault is stored) after switching ignition on using the 2nd key.
- Select function 02 "Interrogate fault memory". If there is no fault stored, the adaption of the keys has been successfully completed.