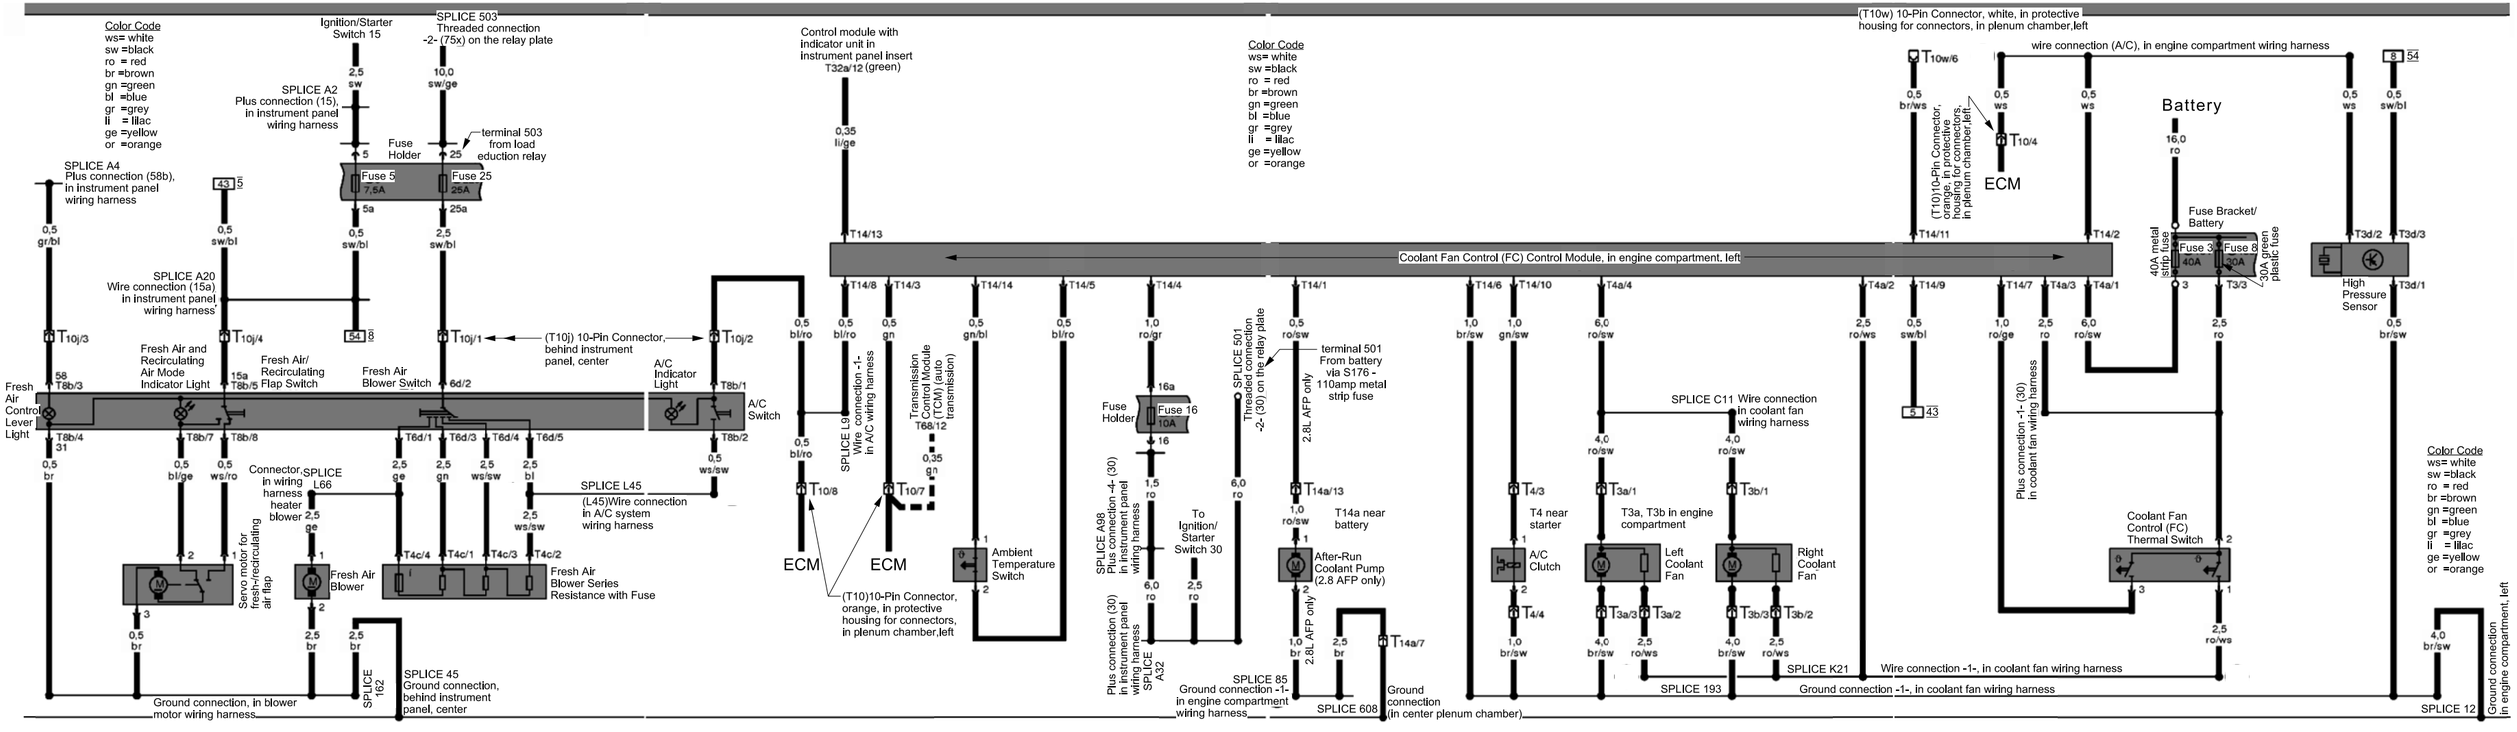
Color Code
ws= white
sw =black
ro = red
br =brown
gn =green
bl =blue
gr =grey
li = lilac
ge =yellow
or =orange
Ignition/Starter Switch 15
SPLICE 503 Threaded connection -2- (75x) on the relay plate
SPLICE A2 Plus connection (15), in instrument panel wiring harness
Fuse Holder
terminal 503 from load eduction relay
Fuse 5 7,5A
Fuse 25 25A
SPLICE A4 Plus connection (58b), in instrument panel wiring harness
SPLICE A20 Wire connection (15a) in instrument panel wiring harness
Fresh Air and Recirculating Air Mode Indicator Light
Fresh Air/ Recirculating Flap Switch
Fresh Air Blower Switch
(T10j) 10-Pin Connector, behind instrument panel, center
A/C Indicator Light
A/C Switch
Fresh Air Control Lever Light
Connector, in wiring harness heater blower
SPLICE L66
SPLICE L45 (L45)Wire connection in A/C system wiring harness
Servo motor for fresh-/recirculating air flap
Fresh Air Blower
Fresh Air Blower Series Resistance with Fuse
Ground connection, in blower motor wiring harness
SPLICE 162
SPLICE 45 Ground connection, behind instrument panel, center
Control module with indicator unit in instrument panel insert T32a/12 (green)
Coolant Fan Control (FC) Control Module, in engine compartment, left
SPLICE L9 Wire connection -1- in A/C wiring harness
Transmission Control Module (TCM) (auto transmission) T68/12
ECM
(T10)10-Pin Connector, orange, in protective housing for connectors, in plenum chamber,left
Ambient Temperature Switch
Fuse Holder
Fuse 16 10A
SPLICE A98 Plus connection -4- (30) in Instrument panel wiring harness
Plus connection (30) in instrument panel wiring harness SPLICE A32
To Ignition/ Starter Switch 30
SPLICE 501 Threaded connection -2- (30) on the relay plate
terminal 501 From battery via S176 - 110amp metal strip fuse
2.8L AFP only
T14a near battery
After-Run Coolant Pump (2.8 AFP only)
SPLICE 85 Ground connection -1- in engine compartment wiring harness
SPLICE 608
Ground connection (in center plenum chamber)
T4 near starter
A/C Clutch
SPLICE C11 Wire connection in coolant fan wiring harness
T3a, T3b in engine compartment
Left Coolant Fan
Right Coolant Fan
SPLICE 193
SPLICE K21
Wire connection -1-, in coolant fan wiring harness
Ground connection -1-, in coolant fan wiring harness
(T10w) 10-Pin Connector, white, in protective housing for connectors, in plenum chamber,left
wire connection (A/C), in engine compartment wiring harness
(T10)10-Pin Connector, orange, in protective housing for connectors, in plenum chamber,left
ECM
Battery
Fuse Bracket/ Battery
40A metal strip fuse
Fuse 3 40A
Fuse 30A
30A green plastic fuse
High Pressure Sensor
Plus connection -1- (30) in coolant fan wiring harness
Coolant Fan Control (FC) Thermal Switch
SPLICE 12
Ground connection in engine compartment, left