




Remove (4) plugs underneath your car. They are located near the factory lift points. They simply pull out of their hole.



Find something 1-1/2" diameter or smaller. The wider, the more stable and easier to install

In this case, I had some string around a heavy cardboard core

The shorter, the better since you need to place this on top of a scissor lift type jack

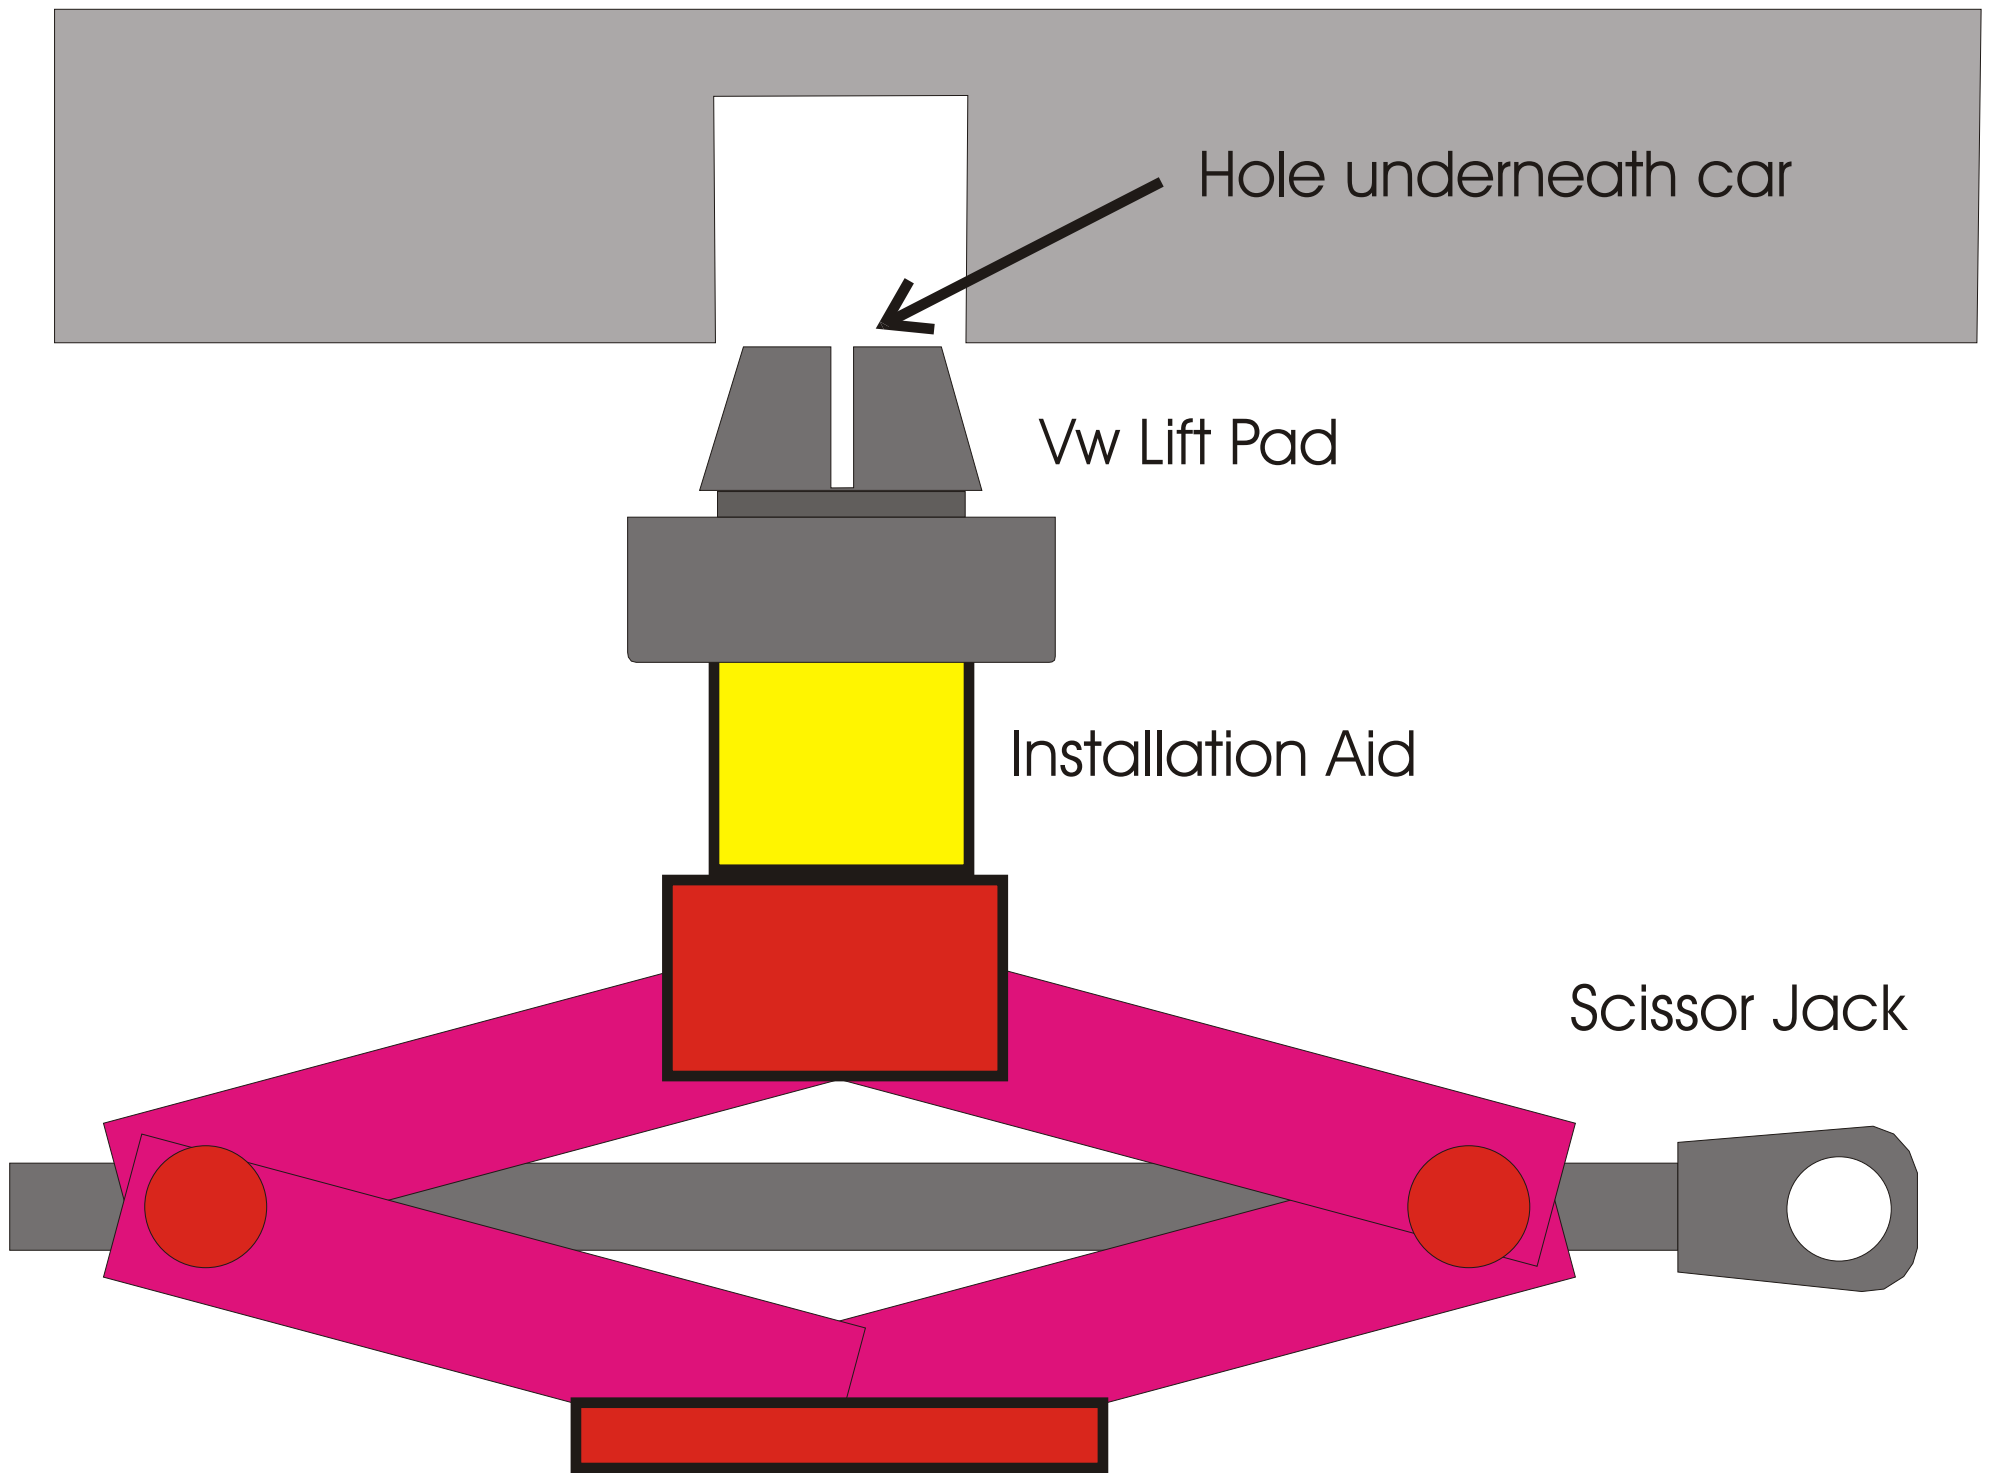

Hole underneath car

Vw Lift Pad

Installation Aid

Scissor Jack

