


New cable guide with repair kit

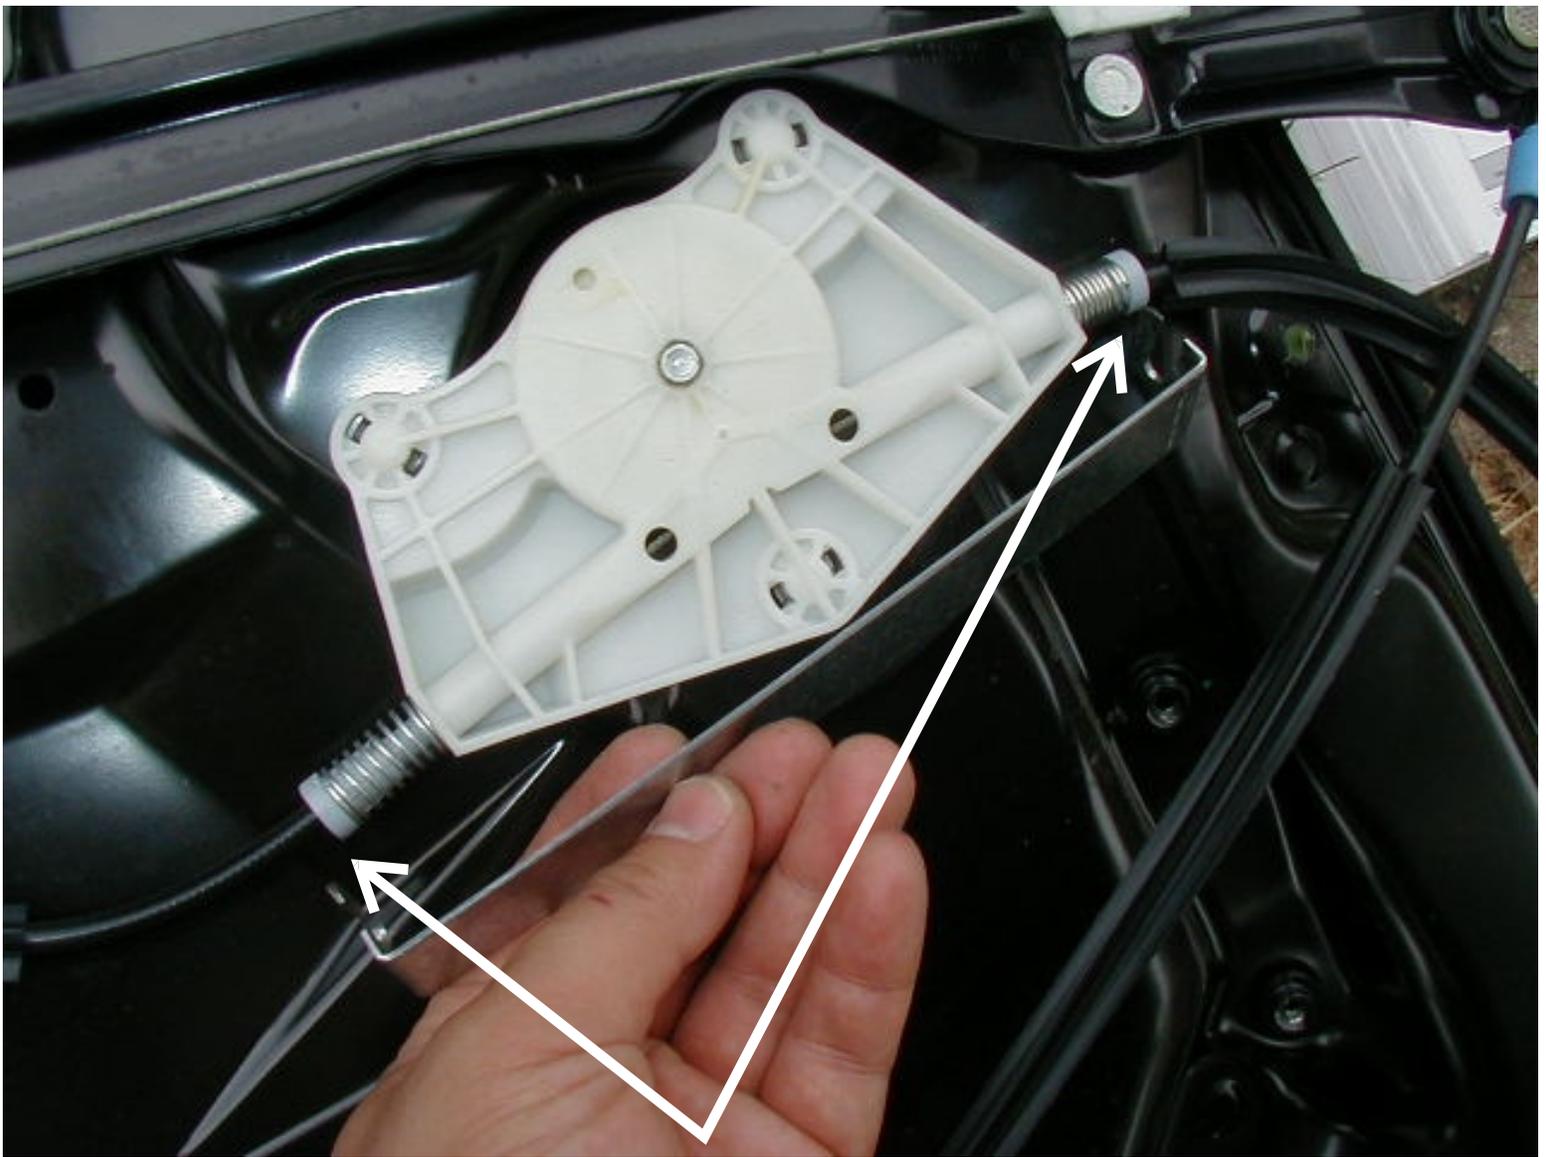


Keeps spring tension on both cables and maintains proper alignment to cables



Clip here and here

Using the metal part of the repair kit, clip and hold each spring loaded end to keep the cable taught

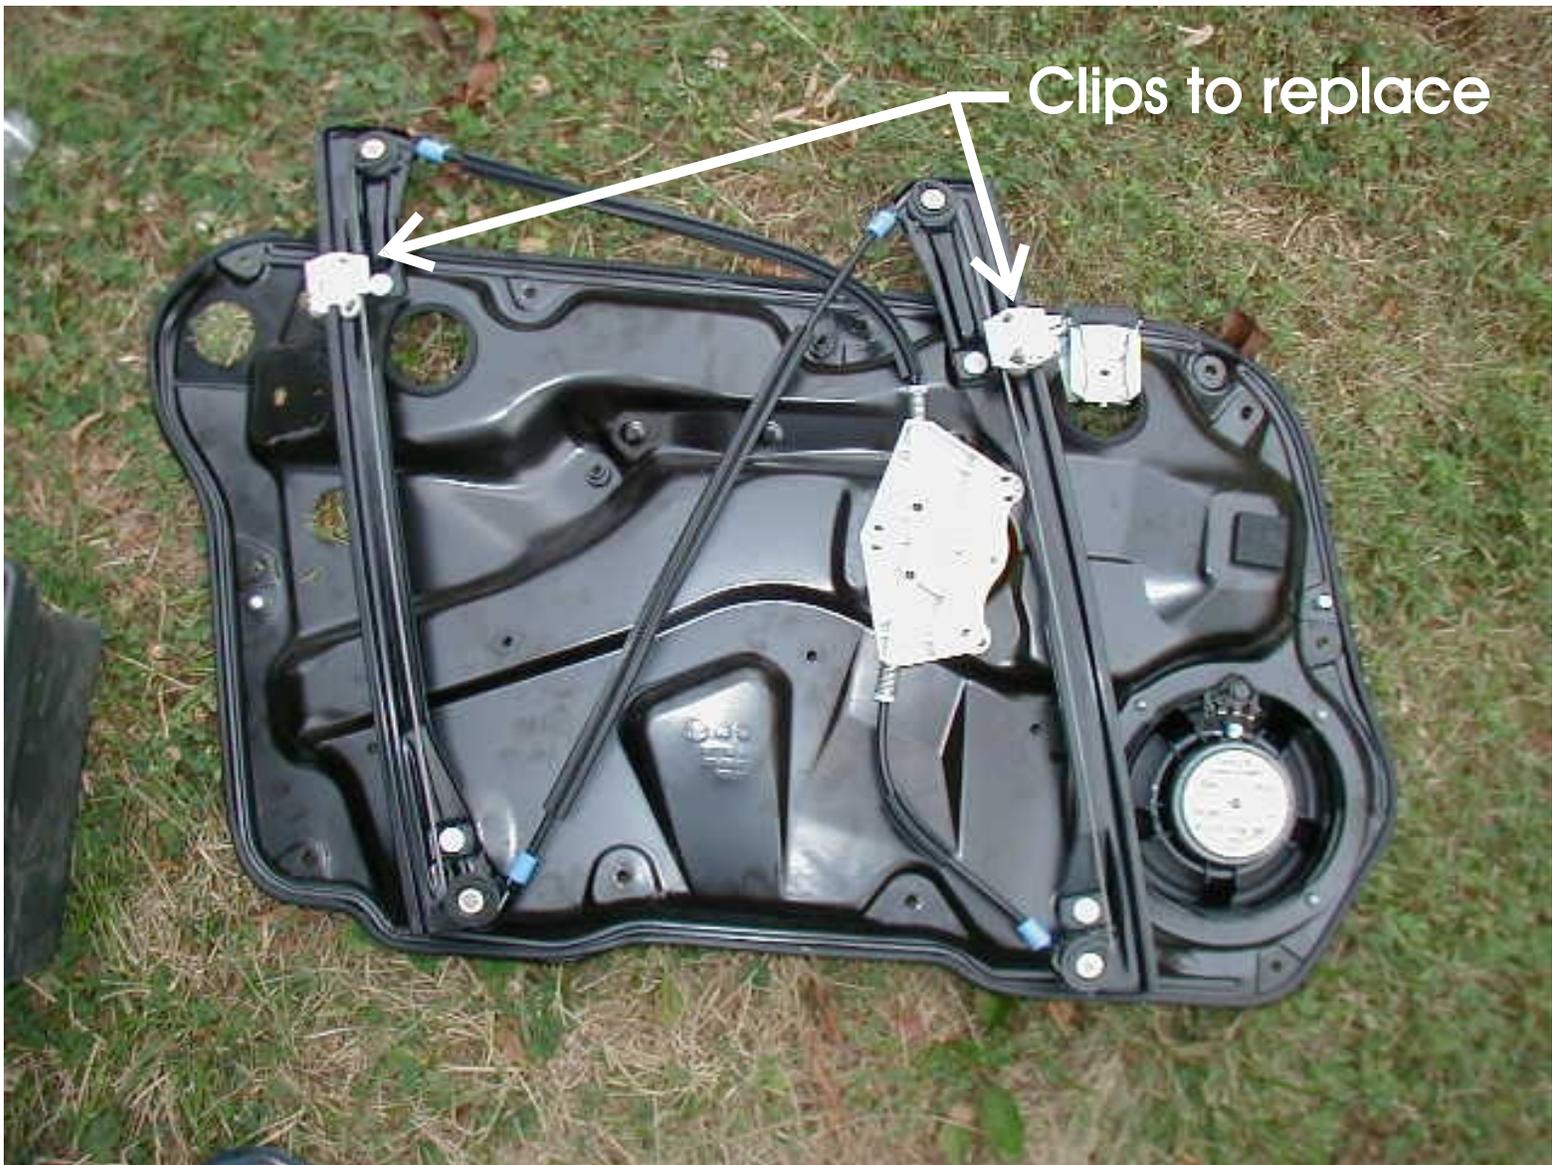


Inside of window regulator



Broken Regulator Clip



In-tact Regulator Clip

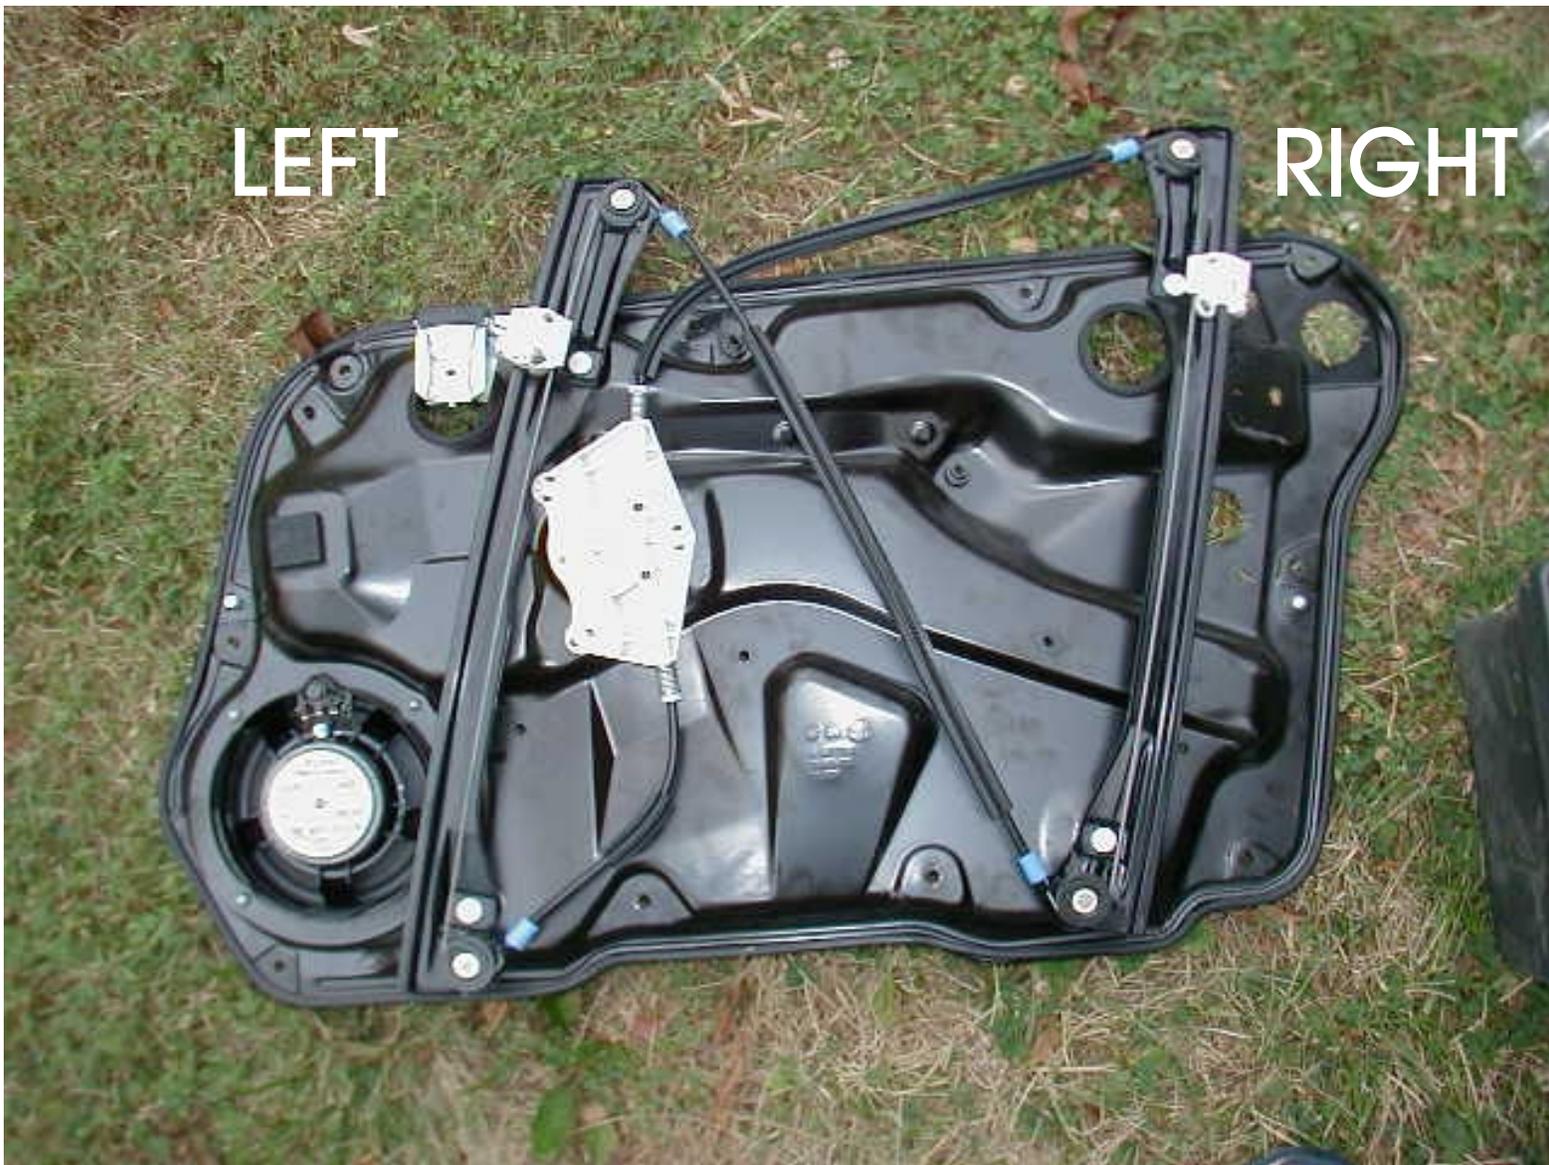

Left:
Remove both cables on this side and replace with new clip. Slide clip from the top and move down to position and install the cable

Insert the 2nd cable to new clip, then attach the right side.

Right:
Remove both cables on this side and replace with new clip. Do not attach cables until the other side is replaced

You will need to use pliers to pull the cable taught




TAB →

There is a tab that separates the two cables




New and Improved Regulator clip installed

There are Two cables that you'll need to get a hand keeping tension in order to reinstall the new clip

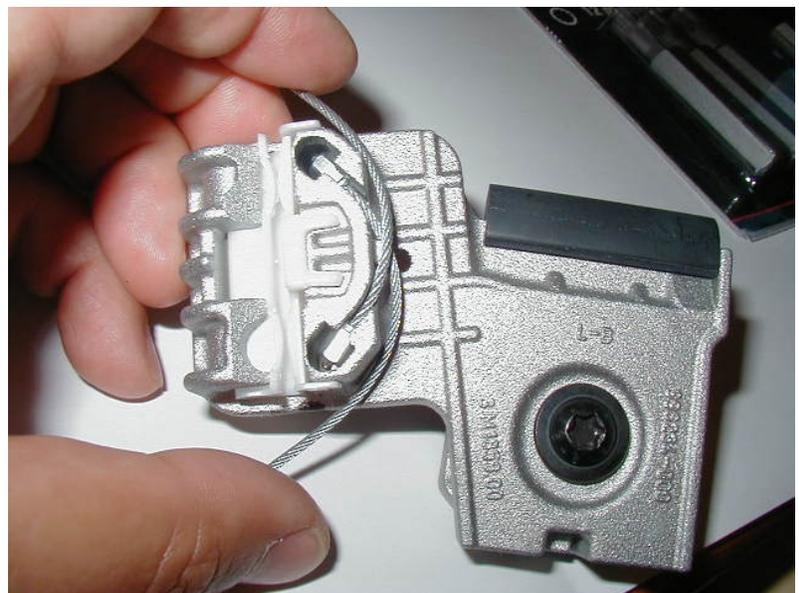

Remove one corner cable from the pulley. This slack will allow you to attach each cable end to the new clip

Then, attach the blue cable guide end into the regulator slot and use the pulley to re-attach the cable to the pulley.

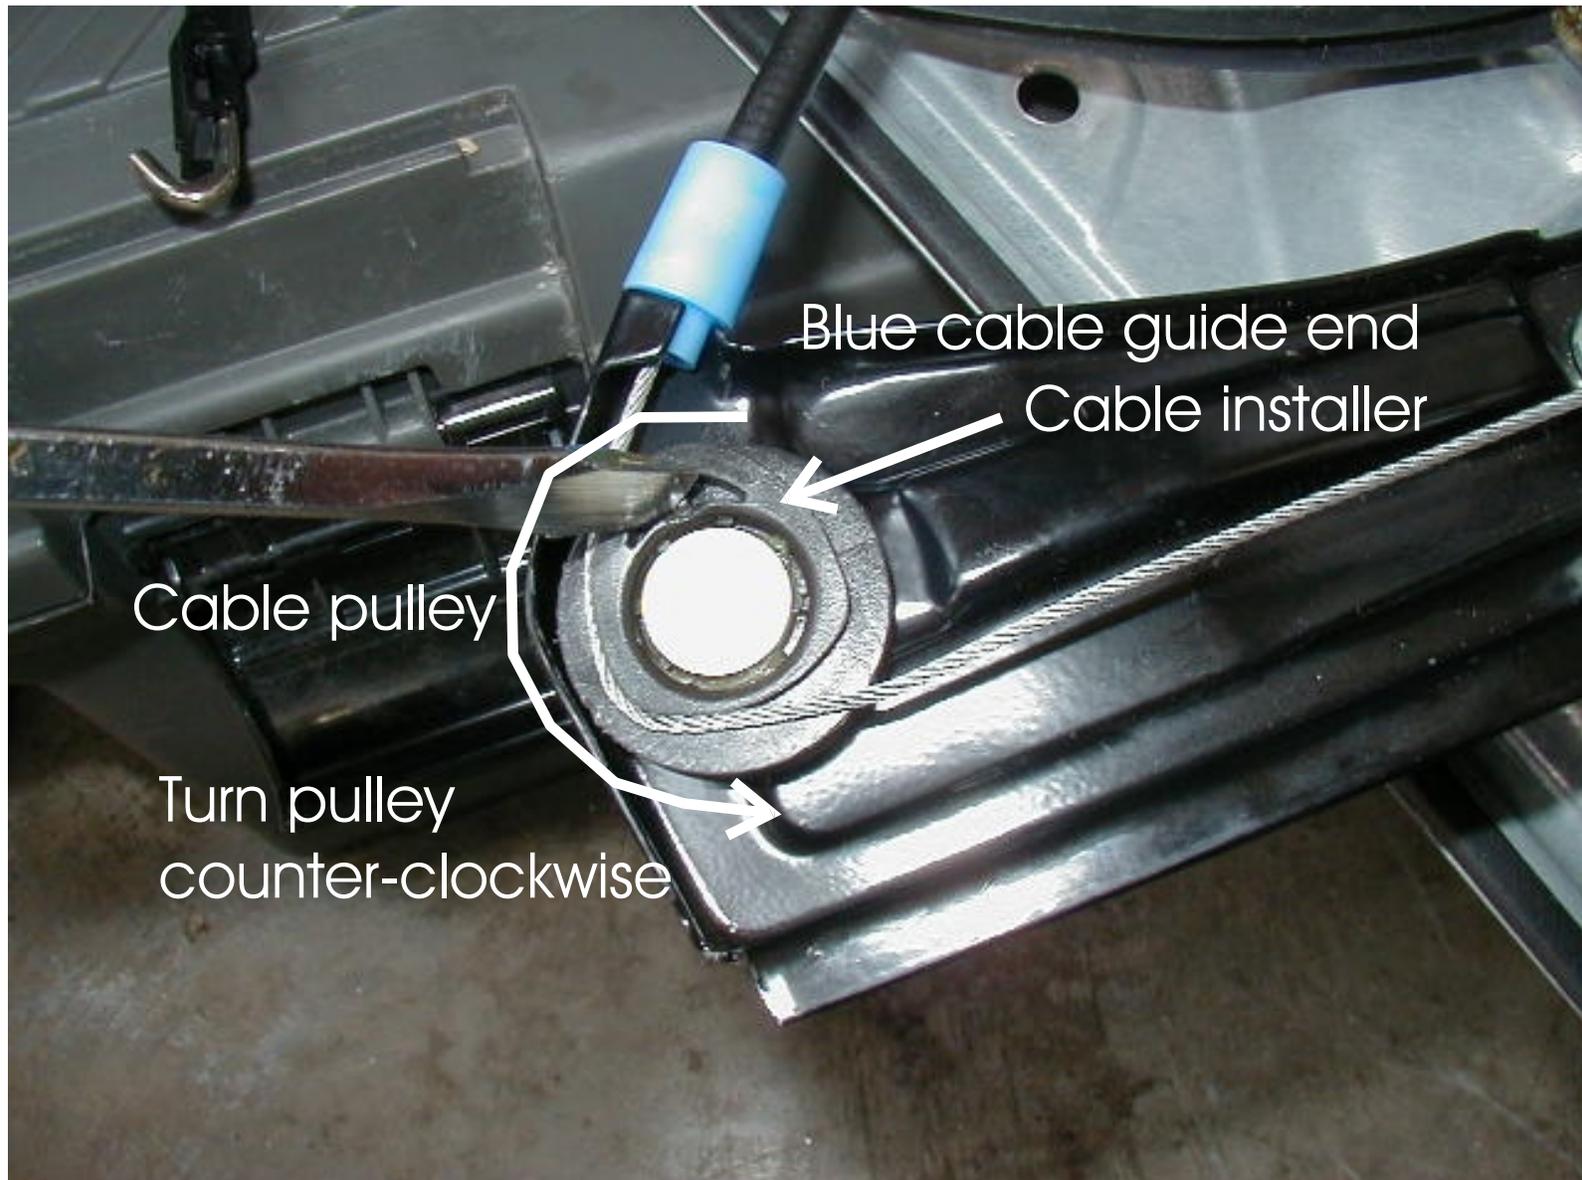

As you rotate the cable pulley, the cable will be placed into the cable pulley guide





The final turn, done!!