


Driver information system

From model year 2002

Fuse box

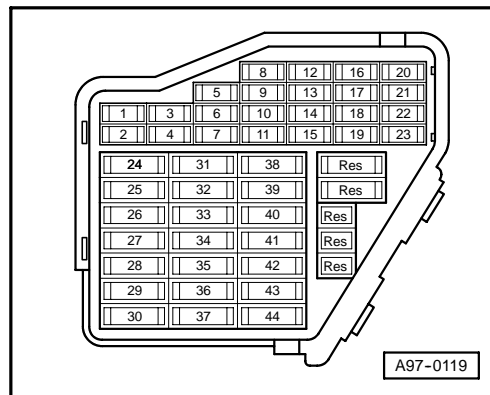


Fuse colours:

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7.5 A - brown
- 5 A - beige


From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

13-point relay carrier

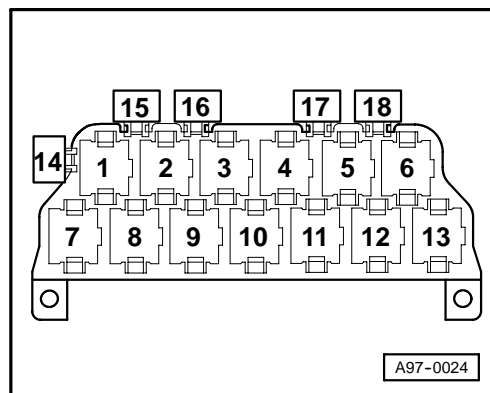

Position of relays:

- 2** - Bulb monitoring device (J123)
- 3** - Bulb monitoring device (J123)

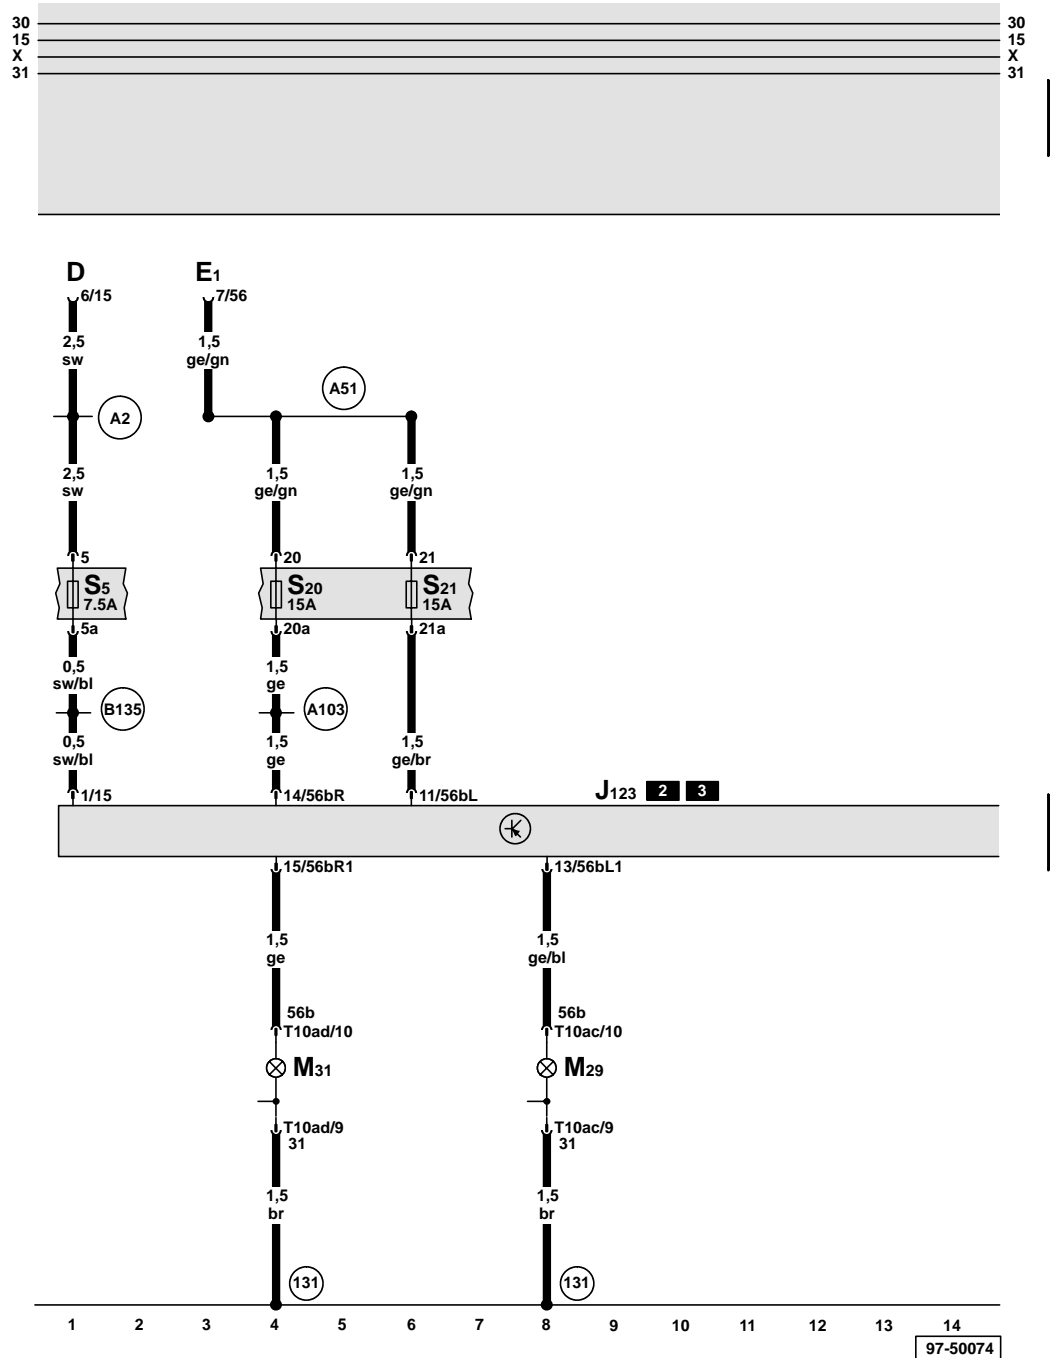

Bulb monitoring device, dipped beam headlights

- D - Ignition/starter switch
- E1 - Lighting switch
- J123 - Bulb monitoring device
- M29 - Dipped beam bulb, left
- M31 - Dipped beam bulb, right
- S5 - Fuse in fuse box
- S20 - Fuse in fuse box
- S21 - Fuse in fuse box
- T10ac - 10-pin connector, on headlight, left
- T10ad - 10-pin connector, on headlight, right
- (131) - Earth connection -2-, in engine compartment wiring harness
- (A2) - Positive (+) connection (15), in dash panel wiring harness
- (A51) - Connection (56), in dash panel wiring harness
- (A103) - Connection -2- (56), in dash panel wiring harness
- (B135) - Connection (15a), in interior wiring harness


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange

Bulb monitoring device, tail lights, brake lights

- C10 - Suppression filter
- E1 - Lighting switch
- F - Brake light switch
- J123 - Bulb monitoring device
- M2 - Tail light bulb, right
- M4 - Tail light bulb, left
- M9 - Brake light bulb, left
- M10 - Brake light bulb, right
- M25 - High level brake light bulb
- S22 - Fuse in fuse box
- S223 - Fuse 23 in fuse box

- (98) - Earth connection, in tailgate/boot lid wiring harness
- (238) - Earth connection -1-, in interior wiring harness, near luggage compartment light
- (A84) - Connection (58L), in dash panel wiring harness
- (A85) - Connection (58R), in dash panel wiring harness
- (B131) - Connection (54), in interior wiring harness
- (B139) - Connection (PL (parking light, left)), in interior wiring harness
- (B140) - Connection (PR (parking light, right)), in interior wiring harness
- (B185) - Connection -2- (54), in interior wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange

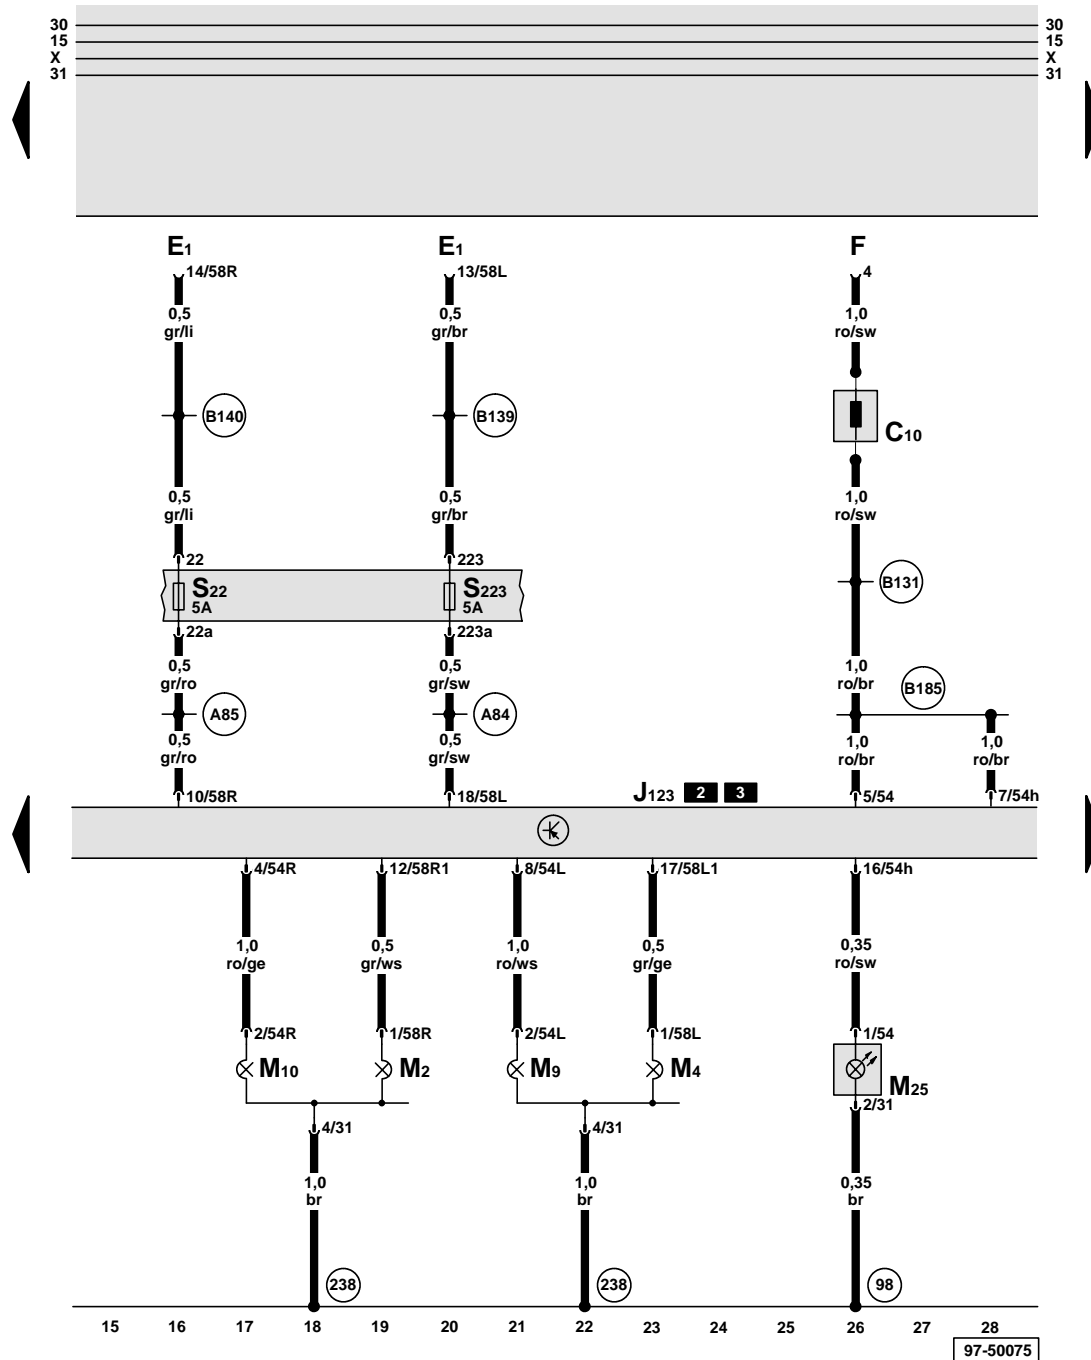


97-50075

On-board computer with auto-check system, function selection switch, reset button

- E91 - Function selection switch
- E92 - Reset button
- J123 - Bulb monitoring device
- J189 - Auto-check system
- J401 - Navigation system with CD drive control unit
- K4 - Side light warning lamp
- R - Radio
- T6k - 6-pin connector, green, radio connector I-2
- T6ap - 6-pin connector, connector C I, on navigation control unit
- T32b - 32-pin connector, grey, on dash panel insert

- (42) - Earth point, steering column
- (279) - Earth connection -5-, in interior wiring harness, behind dash panel
- (A148) - Connection (navigation CAN bus, high), in dash panel wiring harness
- (A149) - Connection (navigation CAN bus, low), in dash panel wiring harness

- - CAN bus (data wire)
- * - Applies to Highline dash panel insert only

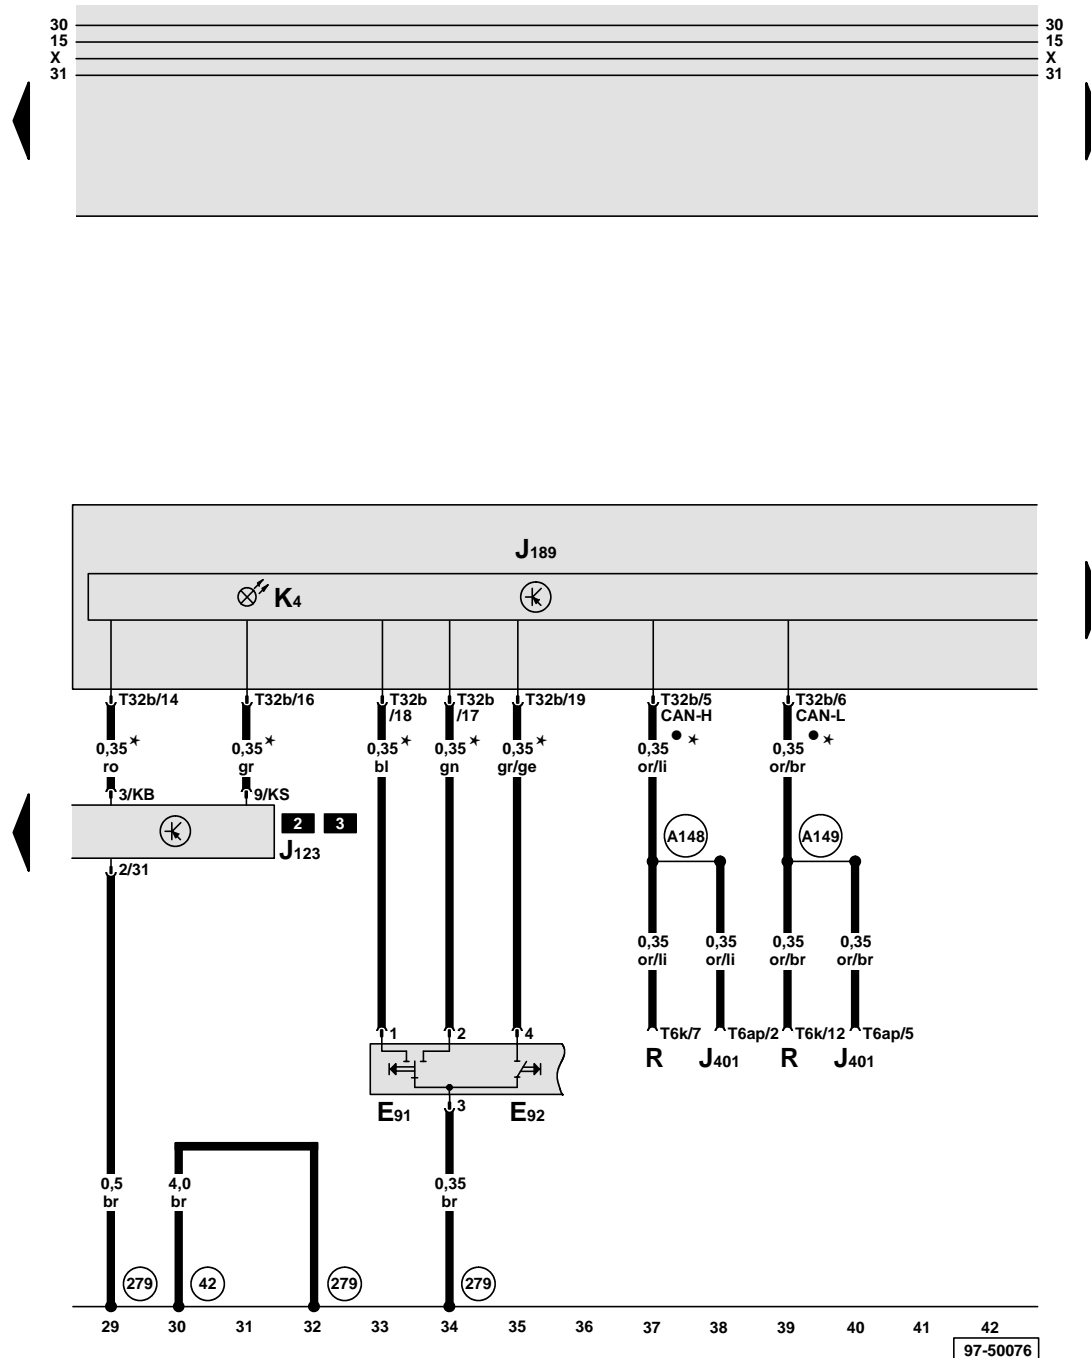

97-50076


Dash panel insert, windscreen washer fluid warning contact, ambient temperature sensor

- C - Alternator
- E87 - Control and display unit for air conditioner
- F77 - Windscreen washer fluid warning contact
- G17 - Ambient temperature sensor
- G106 - Ambient temperature indicator
- J189 - Auto-check system
- J285 - Control unit with display in dash panel insert
- K2 - Alternator warning lamp
- T12a - 12-pin connector, behind dash panel, right
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- T32b - 32-pin connector, grey, on dash panel insert

- (112) - Earth connection -2-, in air conditioner wiring harness
- (269) - Earth connection (sender earth) -1-, in dash panel wiring harness

- * - Models without air conditioner
- ** - Models with air conditioner
- *** - Applies to Highline dash panel insert only
- # - Sender earth output

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange

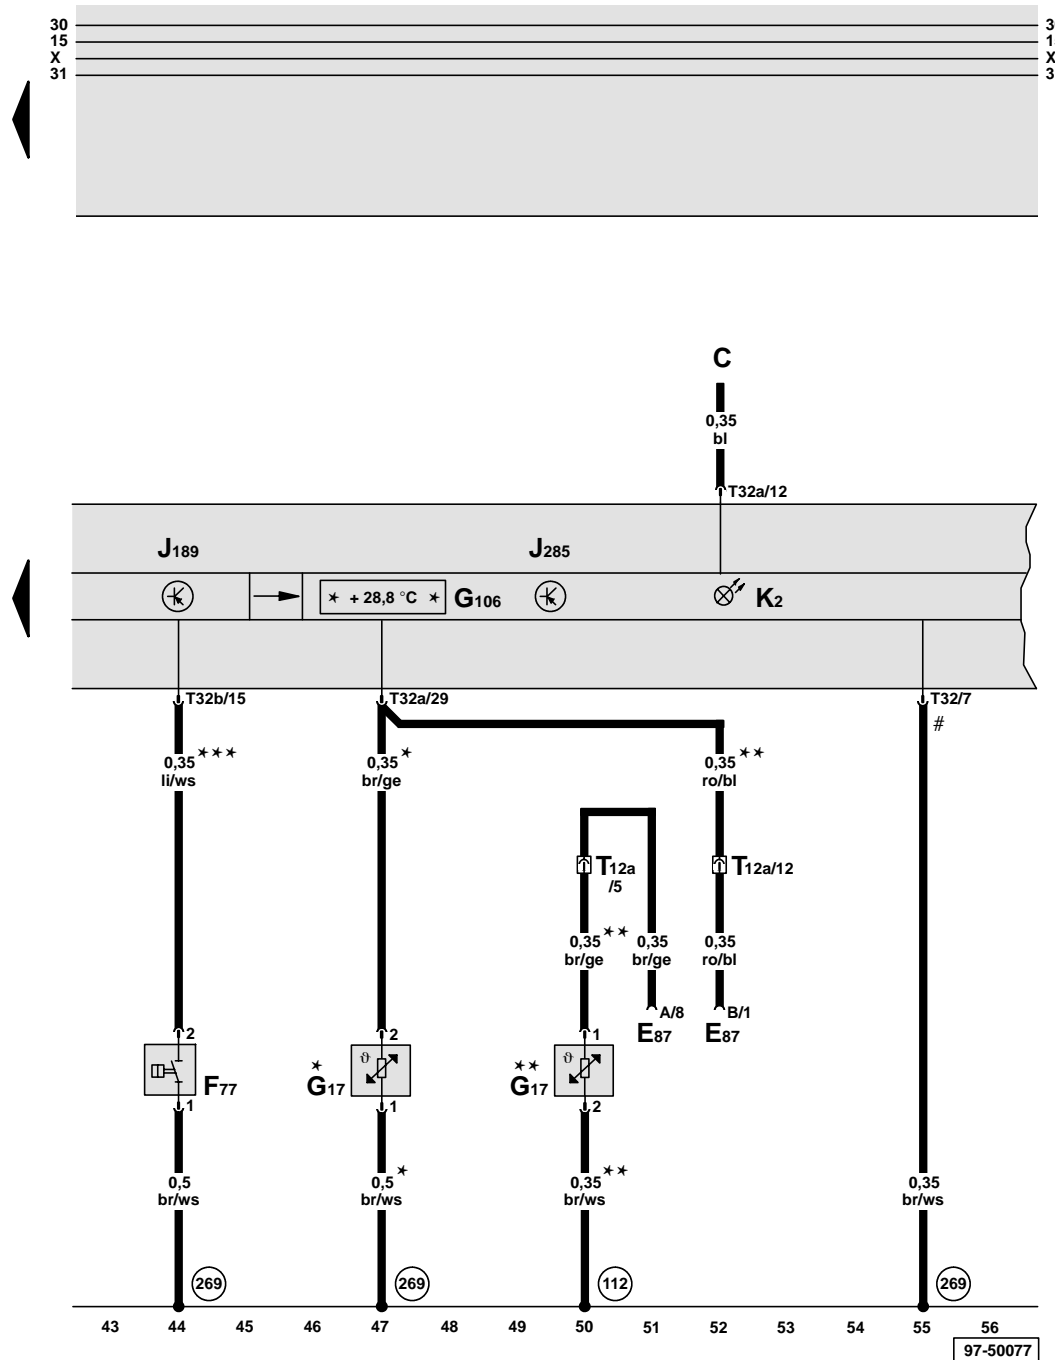

97-50077