


Volkswagen > new Jetta > 2005 - 2006

Communication

91 - Mobile Telephone and Two-Way Radio Operation

Battery, transmitter/receiver unit, fuse and wiring harness, overview

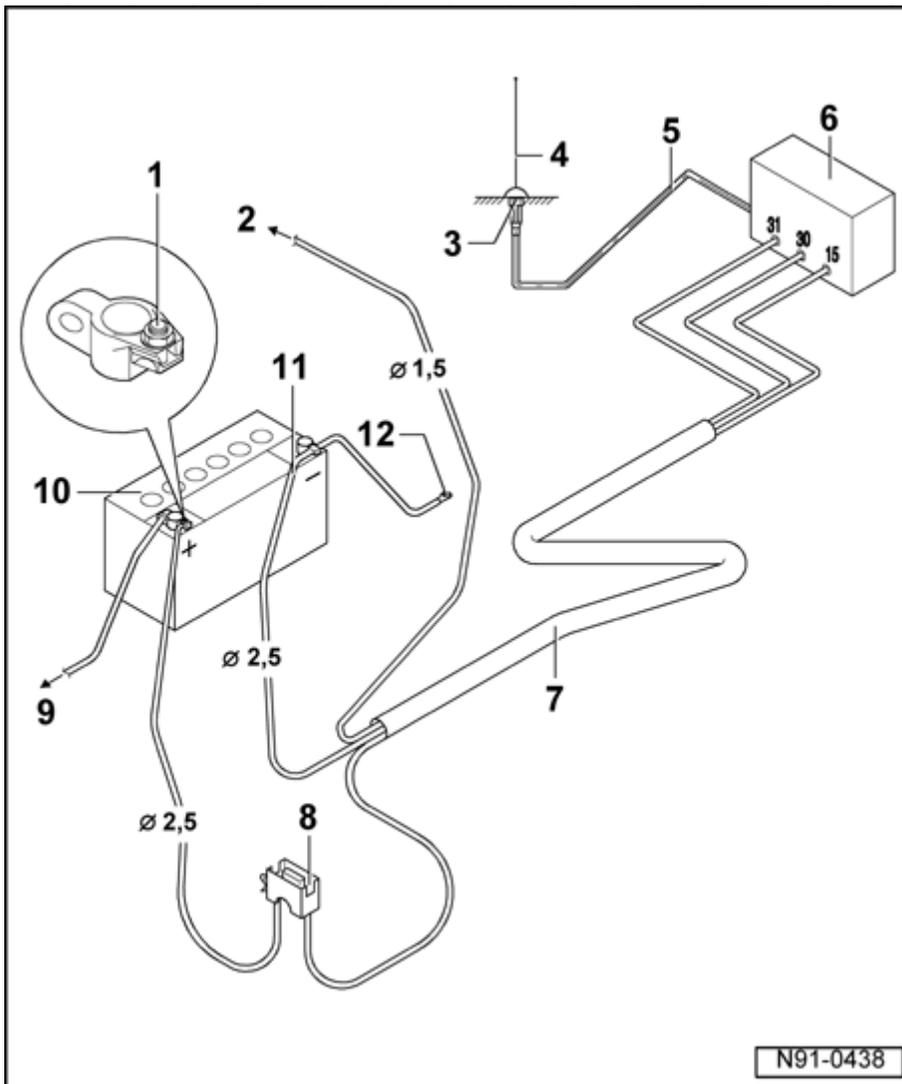

1 - Positive connection

- ◆ red wire with suitable connection

2 - to terminal 15a

- ◆ connection to terminal 15a:
- ◆ ensure wire is protected by fuse

- ◆ Fuse max. 15A

3 - Antenna Ground (GND)

- ◆ ensure correct Ground (GND) connection to body
- ◆ Antenna location must be treated with suitable corrosion protection

4 - Transmitting/Receiving Antenna

- ◆ Component locations: ⇒ Table page ⇒ [Transmitted output and antenna installation locations](#)

5 - Shielded antenna wire

- ◆ Wire with coaxial connector

6 - Telephone or two-way radio transmitter/receiver unit

7 - Wiring harness

- ◆ Voltage supply positive via red wire, 2.5 mm² cross section
- ◆ Voltage supply negative via brown wire, 2.5 mm² cross section
- ◆ If necessary, wire to terminal 15a via black wire 1.5 mm² cross section

8 - Fuse holder

- ◆ Install next to battery

9 - To starter

10 - Battery

- ◆ Location in luggage compartment left and right behind side panels.

11 - Negative wire

12 - Body Ground (GND)

Last updated: December 05 2005 10:41 AM

Copyright © 2005 Volkswagen of America and Robert Bentley, Inc. All rights reserved.